




 











Original	Substitut	Original	Substitut
 Standby	 Power	 CH+	 CH+ / Page+
 Mute	 Mute / Dimmer	 Vol-	 Vol-
 1	 1	 Zoom/Aspect	 Shift + Zoom /
 2	 2	 Zoom/Aspect	 Picture / Format
 3	 3	 CH-	 CH- / Page-
 4	 4	 Menu	 Menu / Home
 5	 5	 Up	 Up
 6	 6	 Exit	 Exit / Cancel / Clear
 7	 7	 Left	 Left
 8	 8	 OK/Enter	 OK
 9	 9	 Right	 Right
 Recall	 Back / Return	 Sleep	 Sleep / Timer
 0	 0	 Down	 Down
 List	 Smart / List	 Source	 AV / Input / RDS
 Vol+	 Vol+	 Red	 Red / Netflix / Search
 Info/Display	 Display / Media	 Green	 Green / APP / Repeat
 Info/Display	 Info / Angle	 Yellow	 Yellow / YouTube / Repeat





Original	Substitut
	Blue / Prime Video / Random
	Text / Goto
	D.Menu / Top
	Shift + Stop /
	Audio / Lang I/II
	Rec / Rec Mode
	Shift + Green / APP /
	Stop / Hold
	Play / Slow
	Pause / Step / Freeze
	Zoom / Size
	Subtitle / EQ
	<< / Tune-
	>> / Tune+
	TV/Radio /
	I<< / Preset-
	Guide / EPG / -/--

Original	Substitut
	>>I / Preset+
	Fav / Marker / PC

