
 


 


















 
 




 




 
 







 
 





 





 




 









 

 

 

 

 

 
 

 
 
 

 
 
Original	Substitut	Original	Substitut
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Play	Menu Off	 Exit
Reveal	 Pause	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Info	 Rec	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 List
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Original	Substitut	
8		8
9		9
Guide -/-- 1.		Guide
0/10		0
2.Fav P/C 2.		Pre Ch
Red		Red
Green		Green
Yellow		Yellow
Blue		Blue
Rotate Text		Shift + Mute
Audio-		Shift + Vol -
Tone-		Media
Audio+		Shift + Vol +
Color+ P.Std		Shift + Format
On/Tim		Shift + Subt
Store Text		Shift + Text
AV 2		Shift + AV

Original	Substitut	
Search		Shift + TV/R
Bright+ Mode		Shift + Menu
Disp		Shift + Info
Tune-		Shift + Left
Aft/Caf		Shift + Ok
Store		Smart
Tune+		Shift + Right
Bright- Sys		Shift + Exit
Contrast+		Shift + Ch +
Color- S.Std		Dual
Contrast-		Shift + Ch -
3.*		Shift + Guide
Nicam/Mono		Shift + Green
Level L		Shift + Yellow
Level R/Woofer		Shift + Blue
4.# 16:9		Format



Original	Substitut	Original	Substitut
Power		Power	Power
Recall		Back	Back
1		1	1
2		2	2
3		3	3
4		4	4
5		5	5
6		6	6
7		7	7
8		8	8
9		9	9
0		0	0
AV / Input		AV	AV
-/--	 + 	Shift + Guide	Shift + Guide
EPG		Guide	Guide
P +		Ch +	Ch +
P -		Ch -	Ch -
Mute		Mute	Mute
Up		Up	Up
Left		Left	Left
OK		Ok	Ok
Right		Right	Right
Down		Down	Down
Vol +		Vol +	Vol +
Vol -		Vol -	Vol -
LCD Menu		Menu	Menu
Exit / DVD Setup		Exit	Exit
Exit / DVD Setup		Options	Options
D.Menu		D. Menu	D. Menu
D.Disp	 + 	Shift + Info	Shift + Info
Red / Prog		Red	Red
Green / Intro		Green	Green
Yellow / Repeat		Yellow	Yellow
Blue / A-B		Blue	Blue



Original	Substitut	
Title		Smart
Eject / PC Auto	+	Shift + Exit
<< / Index		<<
Play/Pause / Fav		Play
Play/Pause / Fav		Pre Ch
>> / Size		>>
Rec / S.Mode		Rec
Rec / S.Mode		Dual
Step >  / Fav +	+	Shift + Play
Step >  / Fav +	+	Shift + Up
Pause / P.Mode		Pause
Pause / P.Mode	+	Shift + Format
<< / Text		<<
<< / Text		Text
Stop / Fav -		Stop
Stop / Fav -	+	Shift + Down
>>  / Hold		>>

Original	Substitut	
>>  / Hold	+	Shift + Stop
Reveal / Angle		Format
Subpage /		Eject
Lang / Audio	+	Shift + Dual
□ / Goto		TV/R
Subtitle		Subt
Info		Info

