



Original	Substitut	Original	Substitut
	Power		Power
	Input		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Guide		Guide / EPG / -/--
	0		0
	Infos		Info / Angle
	Vol +		Vol+
	Mute		Mute / Dimmer
	Prog +		CH+ / Page+
	Vol -		Vol-
	Format		Picture / Format
	Prog -		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Menu		Menu / Home
	Media		Display / Media
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	AD		Audio / Lang I/II





Original	Substitut
	EQ SUBTITLE Subtitle / EQ
	GOTO TEXT Text / Goto
	PROGRAM TV/RADIO TV/Radio /
	PRESET- Fast Reverse I<< / Preset-
	TUNE- Tune Down << / Tune-
	TUNE+ Fast Forward >> / Tune+
	PRESET+ Next Preset >>I / Preset+
	REC MODE Record Rec / Rec Mode
	HOLD Stop / Hold
	SLOW Play / Slow
	STEP - FREEZE Pause / Step / Freeze

Original	Substitut

