



































 



























 















 







Original	Substitut	Original	Substitut
 Power	 Power	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 Source	 AV / Input / RDS
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 Enter	 OK
 4	 4	 Right	 Right
 5	 5	 Exit	 Exit / Cancel / Clear
 6	 6	 Down	 Down
 7	 7	 Display	 Display / Media
 8	 8	 FAV	 Fav / Marker / PC
 9	 9	 Vol+	 Vol+
 0	 0	 FAV+	 Shift + Yellow / YouTube /
 -/--	 Shift + Guide / EPG / -/--	 CH+	 CH+ / Page+
 Recall	 Back / Return	 Vol-	 Vol-
 P.Mode	 Picture / Format	 Repeat/FAV-	 Shift + Green / APP /
 S.Mode	 Sound / Title	 CH-	 CH- / Page-
 Auto	 Eject / Surround	 Text	 Text / Goto

Original	Substitut	Original	Substitut
 Power	 Mute / Dimmer	 Shift	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG UII	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	 AV INPUT
 HOME	 ANGLE	 MENU	 INFO
 CLEAR	 OK	 RETURN	 BACK
 EXIT	 SMART	 VOL+	 CH PAGE
 CANCEL	 MEDIA DISPLAY	 TV	 DVD
 LIST	 DISPLAY	 CD - STB	 VIDEO
 VOL+	 TAPE	 TUNER	 AUX - HDD
 VOL-	 USB	 BLUETOOTH	 HDMI - BAT
 TV	 HDMI - BAT	 PC	 FAV MARKER
 DVD	 GUIDE EPG	 0	 NETFLIX
 CD - STB	 NETFLIX	 APP	 YouTube
 VIDEO	 APP	 YouTube	 Prime Video
 AUX - HDD	 SEARCH	 REPEAT	 REPEAT A-B
 HDMI - BAT	 REPEAT A-B	 RANDOM	
BLUETOOTH	RANDOM		
FAV MARKER			



