



Original	Substitut	Original	Substitut
 Standby	 Power	 Right	 Right
 Info	 Info / Angle	 Vol+	 Vol+
 Subtitle	 Subtitle / EQ	 Record	 Rec / Rec Mode
 Mute	 Mute / Dimmer	 CH-	 CH- / Page-
 I<<	 I<< / Preset-	 Down	 Down
 Play	 Play / Slow	 Stop	 Stop / Hold
 <<	 << / Tune-	 1	 1
 >>I	 >>I / Preset+	 2	 2
 Pause	 Pause / Step / Freeze	 3	 3
 >>	 >> / Tune+	 EPG	 Guide / EPG / -/-
 Menu	 Menu / Home	 4	 4
 Up	 Up	 5	 5
 CH+	 CH+ / Page+	 6	 6
 Exit	 Exit / Cancel / Clear	 Back	 Back / Return
 Vol-	 Vol-	 7	 7
 Left	 Left	 8	 8
 OK	 OK	 9	 9





Original	Substitut	Original	Substitut
	0		0
	Media		Display / Media
	USB	 + 	Shift + 8
	Tv/Radio		TV/Radio /
	Audio		Audio / Lang I/II
	TTX		Text / Goto
	Timer		Sleep / Timer
	FAV		Fav / Marker / PC
	Res		Smart / List
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Original	Substitut





Original	Substitut	Original	Substitut
 Standby	 Power	 Right / Vol+	 Vol+
 Info	 Info / Angle	 Right / Vol+	 Right
 Subtitle	 Subtitle / EQ	 Record	 Rec / Rec Mode
 Mute	 Mute / Dimmer	 Down / CH-	 Down
 I<<	 I<< / Preset-	 Down / CH-	 CH- / Page-
 Play	 Play / Slow	 Stop	 Stop / Hold
 <<	 << / Tune-	 1	 1
 >>I	 >>I / Preset+	 2	 2
 Pause	 Pause / Step / Freeze	 3	 3
 >>	 >> / Tune+	 EPG	 Guide / EPG / -/-
 Menu	 Menu / Home	 4	 4
 Up / CH+	 CH+ / Page+	 5	 5
 Up / CH+	 Up	 6	 6
 Exit	 Exit / Cancel / Clear	 Back	 Back / Return
 Left / Vol-	 Vol-	 7	 7
 Left / Vol-	 Left	 8	 8
 OK	 OK	 9	 9





Original	Substitut
 0	 0
 Media	 Display / Media
 USB	 Shift + 8
 TV / Radio	 TV/Radio /
 Audio	 Audio / Lang I/II
 TTX	 Text / Goto
 Timer	 Sleep / Timer
 Fav	 Fav / Marker / PC
 Res.	 Smart / List
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Substitut

