 

 
 


 
 
 

 

 
 
 
 


 
 
 





 
 





Original	Substitut
	Mute / Dimmer
	Power
	SHIFT + INFO Shift + Info / Angle
	SHIFT + MENU Shift + Menu /
	SHIFT + CLEAR / CANCEL Shift + Exit / Cancel / Clear
	GOTO TEXT Text / Goto
	EQ SUBTITLE Subtitle / EQ
	SIZE ZOOM Zoom / Size
	LIST SMART Smart / List
	MEDIA DISPLAY Display / Media
	TIMER SLEEP Sleep / Timer
	VOL + Vol+
	GUIDE EPG Guide / EPG / -/-
	CH PAGE + CH+ / Page+
	VOL - Vol-
	LANG I/II AUDIO Audio / Lang I/II
	CH PAGE - CH- / Page-

Original	Substitut
	Menu / Home
	Up
	CLEAR EXIT CANCEL Exit / Cancel / Clear
	SHIFT + LEFT Shift + Left
	OK
	SHIFT + RIGHT Shift + Right
	SHIFT + HDMI - SAT 0 Shift + 0
	Down
	ANGLE INFO Info / Angle
	TV 1 1
	DVD 2 2
	CD - STB 3 3
	VIDEO 4 4
	TAPE 5 5
	TUNER 6 6
	AUX - HDD 7 7
	USB 8 8





Original		Substitut	
	9		9
	<		Left
	0		0
	>		Right
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	TV		TV/Radio /
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Radio		Shift + TV/Radio / Program

Original		Substitut	

