

 








 











 
















 







 






Original	Substitut	Original	Substitut
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH +	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol +	 Vol+
 6	 6	 CH -	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol -	 Vol-
 9	 9	 Fav	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 Audio I/II	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red / <<	 << / Tune-
 Exit	 Exit / Cancel / Clear	 Red / <<	 Red / Netflix / Search

Original	Substitut	Original	Substitut
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH +	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol +	 Vol+
 6	 6	 CH -	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol -	 Vol-
 9	 9	 Fav	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 Audio I/II	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red / <<	 << / Tune-
 Exit	 Exit / Cancel / Clear	 Red / <<	 Red / Netflix / Search






















 



 





 
 


























Original		Substitut		Original		Substitut	
	Green / >>>		>>> / Tune+				
	Green / >>>		Green / APP / Repeat				
	Yellow / I<<<		I<<< / Preset-				
	Yellow / I<<<		Yellow / YouTube / Repeat				
	Blue / >>I		>>I / Preset+				
	Blue / >>I		Blue / Prime Video / Random				
	Text / Play/Pause		Text / Goto				
	Text / Play/Pause		Play / Slow				
	Text / Play/Pause		Pause / Step / Freeze				
	Stop / Still		Stop / Hold				
	Radio		TV/Radio /				
	Size / Aspect		Picture / Format				
	Size / Aspect		Zoom / Size				
	[≡x]		Eject / Surround				
	Subtitle / [≡o]		Subtitle / EQ				
	DMP		D.Menu / Top				
	Rec		Rec / Rec Mode				





Original	Substitut	Original	Substitut
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH+	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol+	 Vol+
 6	 6	 CH-	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol-	 Vol-
 9	 9	 ♥	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 O)/I-II/Audio	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red	 Red / Netflix / Search
 Exit	 Exit / Cancel / Clear	 <<	 << / Tune-

Original	Substitut	Original	Substitut
 Power	 Power	 Up	 Up
 TV	 Left	 OK	 Left
 AUX	 Mute / Dimmer	 Enter	 OK
 REC MODE	 Mute	 Right	 Right
 Mute	 Mute	 Mute	 Mute
 Mute	 Mute	 Mute	 Mute
 Mute	 Mute	 Mute	 Mute
 Mute	 Mute	 Mute	 Mute
 Mute	 Mute	 Mute	 Mute
 Mute	 Mute	 Mute	 Mute
 Mute	 Mute	 Mute	 Mute
 Mute	Mute	Mute	Mute
Mute	Mute	Mute	Mute
Mute	Mute	Mute	Mute
Mute	Mute	Mute	Mute
Mute	Mute	Mute	Mute
Mute	Mute	Mute	Mute
Mute	Mute	Mute	Mute
Mute	Mute	Mute	Mute
Mute	Mute	Mute	Mute
Mute	Mute	Mute	Mute
Mute	Mute	Mute	Mute
Mute	Mute	Mute	Mute
Mute	Mute	Mute	Mute





Original		Substitut		Original	Substitut
	Green		Green / APP / Repeat		
	>>		>> / Tune+		
	Yellow		Yellow / YouTube / Repeat		
	I<<		I<< / Preset-		
	Blue		Blue / Prime Video / Random		
	>>		>>  / Preset+		
	[≡]		Text / Goto		
	Play		Play / Slow		
	Pause		Pause / Step / Freeze		
	[≡+]		Shift + Stop /		
	Stop/Still		Stop / Hold		
	Radio		TV/Radio /		
	[≡♦]/[++]		Zoom / Size		
	[≡x]		Eject / Surround		
	[≡o]/Subtitle		Subtitle / EQ		
	DMP		D.Menu / Top		
	Rec		Rec / Rec Mode		

