





 
 

 





 

 

 
 
 

 
 


 






 


 

 

 

 

 


 






 

 


 
 

 





	Original	Substitut	Original	Substitut
	 Power	 Power	 Right / Vol +	 Vol +
	 SUB-T	 Subt	 Left / Vol -	 Left
	 Lang	 Dual	 Left / Vol -	 Vol -
	 Mute	 Mute	 OK	 Ok
	 EPG	 Guide	 FAV	 Pre Ch
	 Goto	 Smart	 TV / Radio	 TV/R
	 Page +	 Shift + Ch +	 Recall	 Back
	 Page -	 Shift + Ch -	 Info	 Info
	 TTX	 Text	 1	 1
	 Repeat	 Shift + Text	 2	 2
	 Menu	 Menu	 3	 3
	 Exit	 Exit	 4	 4
	 Up / CH +	 Up	 5	 5
	 Up / CH +	 Ch +	 6	 6
	 Down / CH -	 Down	 7	 7
	 Down / CH -	 Ch -	 8	 8
	 Right / Vol +	 Right	 9	 9










 

 
 

 

 
 

 






 







 












 



 
 

 





 

 









Original		Substitut		Original		Substitut	
	0		0				
	<<		<<				
	>>		>>				
	<<		<<				
	>>		>>				
	Play		Play				
	Pause / Timeshift		Pause				
	Stop		Stop				
	Rec		Rec				
	Red / PVR		Red				
	Green / V-Format		Green				
	Green / V-Format		Format				
	Yellow / Aspect		Yellow				
	Yellow / Aspect		3D				
	Blue / Timer		Blue				



 





Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute
	EPG		Guide
	Info		Info
	Audio		Dual
	Recall		Back
	Subtitle		Subt
	Menu		Menu
	Exit		Exit
	Up / CH +		Up
	Up / CH +		Ch +
	Down / CH -		Down
	Down / CH -		Ch -
	Right / Vol +		Right
	Right / Vol +		Vol +
	Left / Vol -		Left
	Left / Vol -		Vol -
	OK		Ok
	FAV		Pre Ch
	TV / Radio		TV/R
	Text		Text
	Goto		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	USB		Media
	Rec		Rec





Original		Substitut		Original		Substitut	
	Stop		Stop				
	Play / Pause		Play				
	Play / Pause		Pause				
	<<		<<				
	>>		>>				
	<<		<<				
	>>		>>				
	---	 + 	Shift + 1				
	---	 + 	Shift + 2				
	---	 + 	Shift + 3				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

