














 
 
 


 
 


 

 

 



 

 
 
 

 

 






 
 



 



 
 
 

 
 


 

 
 




Original	Substitut	Original	Substitut
 Power	 Power	 Vol -	 Vol -
 Mute	 Mute	 CH +	 Ch +
 1	 1	 CH -	 Ch -
 2	 2	 Exit	 Exit
 3	 3	 Red / USB Left	 Red
 4	 4	 Red / USB Left	 Shift + Left
 5	 5	 Green / USB	 Green
 6	 6	 Green / USB	 Shift + Down
 7	 7	 Yellow / USB Up	 Yellow
 8	 8	 Yellow / USB Up	 Shift + Up
 9	 9	 Blue / USB Right	 Blue
 0	 0	 Blue / USB Right	 Shift + Right
 10+	 Shift + Guide	 Up	 Up
 SUBTL	 Subt	 Left	 Left
 EPG	 Guide	 Enter	 Ok
 Menu	 Menu	 Right	 Right
 Vol +	 Vol +	 Down	 Down

Original	Substitut	Original	Substitut
 Vol -	 Vol -	 Vol -	 Vol -
 CH +	 Ch +	 CH +	 Ch +
 CH -	 Ch -	 CH -	 Ch -
 Exit	 Exit	 EXIT	 Exit
 Red / USB Left	 Red	 Red / USB Left	 Red
 Red / USB Left	 Shift + Left	 Red / USB Left	 Shift + Left
 Green / USB	 Green	 Green / USB	 Green
 Green / USB	 Shift + Down	 Green / USB	 Shift + Down
 Yellow / USB Up	 Yellow	 Yellow / USB Up	 Yellow
 Yellow / USB Up	 Shift + Up	 Yellow / USB Up	 Shift + Up
 Blue / USB Right	 Blue	 Blue / USB Right	 Blue
 Blue / USB Right	 Shift + Right	 Blue / USB Right	 Shift + Right
 Up	 Up	 Up	 Up
 Left	 Left	 Left	 Left
 Enter	 Ok	 ENTER	 Ok
 Right	 Right	 Right	 Right
 Down	 Down	 Down	 Down





 

 
 


 
 
 
 
 
 
 
 


 



 
 




 
 
 



	Original	Substitut
	QV	Options
	FAV	Pre Ch
	Source	AV
	Sleep	Sleep
	Picture	Shift + Format
	Sound	Shift + Dual
	Display	Info
	I/II / Top	Dual
	FAV - / REV	<<
	FAV + / FWD	>>
	USR/CR / Text	Media
	USR/CR / Text	Text
	Play/Pause / Index	Play
	Play/Pause / Index	Shift + Info
	Play/Pause / Index	Pause
	Stop / Cancel	Stop
	Stop / Cancel	Shift + Exit

	Original	Substitut
	Size	Format
	Prog / Mix	Smart
	Prog / Mix	Shift + Sleep
	Return / SUBPG	Back
	Repeat / Reveal	Shift + Back
	Search / Hold	TV/R





Original	Substitut	
	Power	
	AV	
	Exit	
	Menu	
	Dual	
	Media	
	Options	
	Text	
	TV/R	
	1	
	2	
	3	
	6	
	5	
	4	
	7	
	8	

Original	Substitut	
	9	
	0	
	Guide	
	Up	
	Right	
	Ok	
	Left	
	Down	
	Subt	
	Pause	
	Rec	
	Play	
	>>	
	Shift + Media	
	Shift + Dual	
	Shift + 6	

