
 








 





























 



 



 























Original	Substitut	Original	Substitut
 Standby / On	 Power	 DVD Menu	 D.Menu / Top
 Mute	 Mute / Dimmer	 System Setup	 Setup / OPT /
 Play	 Play / Slow	 Test Tone	 Text / Goto
 Pause	 Pause / Step / Freeze	 Auto	 AV / Input / RDS
 Stop	 Stop / Hold	 DVD Setup	 Menu / Home
 << / <I / <II	 << / Tune-	 Up / Tune +	 Up
 >> / II> / I>	 >> / Tune+	 DVD Angle	 Info / Angle
 I<<	 I<< / Preset-	 Left / ST -	 Left
 >>I	 >>I / Preset+	 Enter	 OK
 Sound Mode	 Sound / Title	 Right / ST +	 Right
 DVD Audio	 Audio / Lang I/II	 Clear	 Exit / Cancel / Clear
 DVD Subtitle	 Subtitle / EQ	 Down / Tune -	 Down
 Surround	 Eject / Surround	 Return	 Back / Return
 Quiet / Midnight	 Picture / Format	 Volume +	 Vol+
 DVD Zoom	 Zoom / Size	 System Disp	 Smart / List
 Timer	 Sleep / Timer	 Folder +	 CH+ / Page+
 Program	 TV/Radio /	 Volume -	 Vol-





Original	Substitut
DVD DISP 8 DVD Disp	MEDIA DISPLAY Display / Media
FOLDER - Folder -	CH PAGE CH- / Page-
PROGRAM 1 1	TV 1 1
REPEAT 2 2	DVD 2 2
RANDOM 3 3	CD - STB 3 3
TEST TONE 4 4	VIDEO 4 4
CH LEVEL 5 5	TAPE 5 5
TIMER 6 6	TUNER 6 6
7 7	AUX - HDD 7 7
DVD DISP 8 8	USB 8 8
DIMMER 9 9	BLUETOOTH 9 9
CH LEVEL 5 CH Level	GUIDE EPG Guide / EPG / -/--
0 0	HDMI - SAT 0 0
ENTER Enter	PC FAV MARKER Fav / Marker / PC
ROOM SETUP Room Setup	NETFLIX SEARCH Red / Netflix / Search
REPEAT 2 Repeat	APP REPEAT Green / APP / Repeat
ADVANCED Advanced	YouTube REPEAT A-B Yellow / YouTube / Repeat

Original	Substitut
RANDOM 3 Random	Prime Video RANDOM Blue / Prime Video / Random
TV Power	SHIFT + POWER Shift + Power
DIMMER 9 Dimmer	SHIFT + DIMMER MUTE Shift + Mute / Dimmer
BASS MODE Bass Mode	SHIFT + SOUND Shift + Sound / Title
TOP MENU Top Menu	SHIFT + TOP MENU D.MENU Shift + D.Menu / Top Menu
INPUT TV Input	SHIFT + RDS AV INPUT Shift + AV / Input / RDS
TV Volume +	SHIFT + VOL+ Shift + Vol+
TV Channel +	SHIFT + CH PAGE Shift + CH+ /
TV Volume -	SHIFT + VOL- Shift + Vol-
TV Channel -	SHIFT + CH PAGE Shift + CH- /
TV	SHIFT + TV 1 Shift + 1
DVD / CD	SHIFT + DVD 2 Shift + 2
Line L1 / L2	SHIFT + CD - STB 3 Shift + 3
FM / AM	SHIFT + TUNER 6 Shift + 6

