



 

 



 













 







 


 


























 

 

 





Original	Substitut	Original	Substitut
 Power	 Power	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Guide	 Guide / EPG / -/-
 3	 3	 Down	 Down
 4	 4	 TV / Radio	 TV/Radio /
 5	 5	 Red	 Red / Netflix / Search
 6	 6	 Enregistrer	 Rec / Rec Mode
 7	 7	 Green	 Green / APP / Repeat
 8	 8	 FAV	 Fav / Marker / PC
 9	 9	 Yellow	 Yellow / YouTube / Repeat
 Info	 Info / Angle	 Stop	 Stop / Hold
 0	 0	 Blue	 Blue / Prime Video / Random
 Recall	 Back / Return	 Lecteur Media	 Display / Media
 Menu	 Menu / Home	 I<<	 I<< / Preset-
 Up	 Up	 Play	 Play / Slow
 Quitter	 Exit / Cancel / Clear	 Tune-	 << / Tune-





	Original	Substitut		Original	Substitut
	Timer	Sleep / Timer			
	>>I	>>I / Preset+			
	Pause	Pause / Step / Freeze			
	>>	>> / Tune+			
	TTX	Text / Goto			
	Audio	Audio / Lang I/II			
	S-Titres	Subtitle / EQ			
	Resolution	Picture / Format			

