



 

















Original	Substitut
	TV
	TV
	Audio
	TV / VCR
	Power
	1
	2
	3
	Text
	4
	5
	6
	Subtitle
	7
	8
	9
	Sound

Original	Substitut
	Alt
	0
	i
	Setup
	Exit
	Up
	Navigator
	Left
	OK
	Right
	Vol +
	Down
	CH +
	Vol -
	Mute
	Recall
	CH -





Original		Substitut		Original		Substitut	
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	EPG		Guide / EPG / --				
	Check		Display / Media				

