



Original	Substitut	Original	Substitut
	Power MD		Power
	TV		TV/R
	CD		Yellow
	DVD		Blue
	Tuner/Band		Green
	Tape		Red
	VCR		Smart
	MD		Media
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Stop MD		Stop
	Play MD		Play
	<</I<< MD		<<
	>>/>>I MD		>>
	Up		Up
	Down		Down

Original	Substitut	Original	Substitut
	Right		Right
	Left		Left
	Enter		Ok
	Menu		D. Menu
	Display		Info
	Top Menu/Disc/Deck		Menu
	1 MD		1
	2 MD		2
	3 MD		3
	4 MD		4
	5 MD		5
	6 MD		6
	7 MD		7
	8 MD		8
	9 MD		9
	0 MD		0
	>10/-/- MD		Guide





Original	Substitut	Original	Substitut
Tv/AV	AV	6 Tv	Shift + 6
Stereo	Dual	7 Tv	Shift + 7
Surround	Options	8 Tv	Shift + 8
SFC	Subt	9 Tv	Shift + 9
Test	Back	0 Tv	Shift + 0
Delay	Format	>10/-/- Tv	Shift + Guide
Level	3D		
+	Ch +		
-	Ch -		
Power TV	Shift + Power		
Tv Vol Up	Shift + Vol +		
Tv Vol Down	Shift + Vol -		
1 Tv	Shift + 1		
2 Tv	Shift + 2		
3 Tv	Shift + 3		
4 Tv	Shift + 4		
5 Tv	Shift + 5		

Original	Substitut	Original	Substitut
6 Tv	Shift + 6		
7 Tv	Shift + 7		
8 Tv	Shift + 8		
9 Tv	Shift + 9		
0 Tv	Shift + 0		
>10/-/- Tv	Shift + Guide		





Original		Substitut		Original		Substitut	
	Power DVD		Power		Right		Right
	TV		TV/R		Left		Left
	VCR		Smart		Enter		Ok
	Tuner/Band		Green		Stereo		Dual
	Tape		Red		Surround		Options
	MD		Media		SFC		Subt
	CD		Yellow		Test		Back
	DVD		Blue		Delay		Format
	Play DVD		Play		Level		3D
	I<</<< DVD		<<		+		Ch +
	Stop DVD		Stop		-		Ch -
	>>/>>I DVD		>>		1 DVD		1
	Top Menu/Disc/Deck		Menu		2 DVD		2
	Display		Info		3 DVD		3
	Menu		D. Menu		4 DVD		4
	Up		Up		5 DVD		5
	Down		Down		6 DVD		6





Original	Substitut	Original	Substitut
7 DVD	7		
8 DVD	8		
9 DVD	9		
0 DVD	0		
≥10/--- DVD	GUIDE		
Vol+	Vol +		
Vol-	Vol -		
Muting	Mute		





Original	Substitut	Original	Substitut
	Power CD		Power
	TV		TV/R
	VCR		Smart
	CD		Yellow
	DVD		Blue
	Tape		Red
	MD		Media
	Tuner/Band		Green
	Stop CD		Stop
	I<</<< CD		<<
	>>/>>I CD		>>
	Play CD		Play
	Menu		D. Menu
	Display		Info
	Top Menu/Disc/Deck		Menu
	Up		Up
	Down		Down

Original	Substitut	Original	Substitut
	Right		Right
	Left		Left
	Enter		Ok
	Stereo		Dual
	Surround		Options
	SFC		Subt
	Test		Back
	Delay		Format
	Level		3D
	+		Ch +
	-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Power Tape		Shift + Power
	Stop Tape		Shift + Stop
	Play Tape		Shift + Play





Original	Substitut	Original	Substitut
 <</><< Tape	 +  Shift + <<		
 >>/>> Tape	 +  Shift + >>		
 Top Menu/Disc/Deck	 +  Shift + Menu		
 1 CD-Tape	 1		
 2 CD-Tape	 2		
 3 CD-Tape	 3		
 4 CD-Tape	 4		
 5 CD-Tape	 5		
 6 CD-Tape	 6		
 7 CD-Tape	 7		
 8 CD-Tape	 8		
 9 CD-Tape	 9		
 0 CD-Tape	 0		
 ≥10/-/- CD-Tape	 GUIDE		Guide
 Direct Tuning/Disc Enter	 REPEAT TEXT		Text





Original	Substitut	Original	Substitut
	Power VCR		Power
	VCR		Smart
	Tape		Red
	TV		TV/R
	CD		Yellow
	DVD		Blue
	Tuner/Band		Green
	MD		Media
	Stop		Stop
	I<<</>>>		<<<
	>>>/>>>I		>>>
	Play		Play
	1 VCR		1
	2 VCR		2
	3 VCR		3
	4 VCR		4
	5 VCR		5
	6 VCR		6
	7 VCR		7
	8 VCR		8
	9 VCR		9
	0 VCR		0
	>10/-/- VCR		Guide
	Direct Tuning/Disc Enter		Text
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Top Menu/Disc/Deck		Menu
	Display		Info





Original		Substitut	
	Menu		D. Menu
	Stereo		Dual
	Surround		Options
	SFC		Subt
	Test		Back
	Delay		Format
	Level		3D
	+		Ch +
	-		Ch -
	Power Tuner/Band		Shift + Power
	1 Tuner/Band		Shift + 1
	2 Tuner/Band		Shift + 2
	3 Tuner/Band		Shift + 3
	4 Tuner/Band		Shift + 4
	5 Tuner/Band		Shift + 5
	6 Tuner/Band		Shift + 6
	7 Tuner/Band		Shift + 7

Original		Substitut	
	8 Tuner/Band		Shift + 8
	9 Tuner/Band		Shift + 9
	0 Tuner/Band		Shift + 0
	>10/-/-		Shift + Guide

