
 



 
 
 

 
 
 




 

 
 





 

 


 







	Original	Substitut		Original	Substitut
	Power		Power		Exit
	Mute		Mute		Up
	1		1		Down
	2		2		Right
	3		3		Left
	4		4		Ok
	5		5		Vol +
	6		6		Vol -
	7		7		SHIFT +  Shift + Dual
	8		8		SHIFT +  Shift + Format
	9		9		Ch +
	0		0		Ch -
	Audio		Dual		Sleep
	Recall		Back		Format
	Tv Menu		Menu		Eject
	Source		AV		TV/R
	ChList		List		Text





	Original	Substitut		Original	Substitut
EPG	Epg	GUIDE	Guide		
FAV	Fav	FAV PRE-CH	Pre Ch		
INFO	Info	DISPLAY INFO	Info		
	Red	A	Red		
	Green	B	Green		
	Yellow	C	Yellow		
	Blue	D	Blue		
REVEAL	Reveal	APP MEDIA	Media		
HOLD	Hold	E-MANUAL D.MENU	D. Menu		
INDEX	Index	SHIFT + DISPLAY INFO	Shift + Info		
SUBPAGE	Subpage	SHIFT + TIMER AV	Shift + AV		
LIST	List	HOME SMART	Smart		
MIX	Mix	SETTINGS OPT	Options		
SUBTITLE	Subtitle	AD SUBT	Subt		
SIZE	Size	ECO 3D	3D		
	<<	<<	<<		
	>>	>>	>>		

	Original	Substitut		Original	Substitut
	I<<	<<	I<<		
	>>I	>>	>>I		
	Play	PLAY MODE	Play		
	Pause		Pause		
	Stop	■	Stop		
REC/REP	Rec/Rep	REC MODE	Rec		

