







 
Original	Substitut	Original	Substitut
	Power		Power
	Sleep		Sleep
	TV / AV		AV
	TV		Red
	VCR / AUX		Green
	Tuner / Band		Yellow
	DVD / CD		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Original	Substitut	Original	Substitut
	≧10 / -/--		Guide
	Cancel		Exit
	CH +		Ch +
	CH -		Ch -
	Volume +		Vol +
	Volume -		Vol -
	I<< Skip		I<<
	>>I Skip		>>I
	<< Slow/Search		<<
	>> Slow/Search		>>
	Stop		Stop
	Pause		Pause
	Play		Play
	Top Menu / Direct Navigator		Shift + Menu
	Top Menu / Direct Navigator		List
	Menu / Play List		Menu
	Up		Up





Original	Substitut
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Display / TV Vol -	 Info
 Display / TV Vol -	 Shift + Left
 Return / TV Vol +	 Back
 Return / TV Vol +	 Shift + Right
 Subwoofer	 Shift + Dual
 Super SRND.	 Shift + Options
 SFC	 D. Menu
 C.Focus	 3D
 Dolby PL II	 Format
 Mix 2CH	 Shift + Format
 C.S.M	 Shift + Subt
 Position	 Pre Ch
 Audio	 Dual

Original	Substitut
 Zoom	 Eject
 Muting	 Mute
 Setup	 Options
 FL Display	 Shift + Info
 Group	 TV/R
 Page	 Shift + TV/R
 Repeat	 Text
 Play Mode	 Shift + Play
 CH Select	 Smart
 Test	 Shift + Pre Ch
 Quick Replay	 Media
 Subtitle	 Subt

