




 







 





 





 


























 
 



 

 


 



 

 


 


 
 


 

 
 



 




 





	Original	Substitut		Original	Substitut
	Power DVD		Power		CH -
	Direct Tv Rec		TV/R		ShowView
	DVD		Smart		Manual Skip
	SD/PC		Media		I<< Skip
	1		1		>>I Skip
	2		2		<< Slow/Search
	3		3		Slow/Search >>
	4		4		Stop
	5		5		Pause
	6		6		Play
	7		7		Direct Navigator/Top
	8		8		Function
	9		9		Sub Menu
	0		0		Return
	*/Cancel		Guide		Up
	Input Select		AV		Down
	CH+		Ch +		Right/II>

	Original	Substitut		Original	Substitut
	CH-		Ch -		TV
	ShowView		Blue		DVD
	Manual Skip		Subt		SAT
	I<< Skip		I<<		AUX
	>>I Skip		>>I		PLAY MODE
	<< Slow/Search		<<		PAUSE
	Slow/Search >>		>>		STOP
	Stop		Stop		DISC NAV
	Pause		Pause		SOUND
	Play		Play		AD
	Direct Navigator/Top		Menu		SETTINGS
	Function		Options		LIST
	Sub Menu		D. Menu		DUAL
	Return		Back		SUBT
	Up		Up		PICTURE
	Down		Down		ECO
	Right/II>		Right		3D





Original	Substitut
 <II/Left	 Left
 Enter	 Ok
 Prog/Check	 Sleep
 Display	 Info
 Status	 3D
 Time Slip	 Format
 Timer	 Shift + AV
 Erase	 Exit
 Rec Mode	 Shift + Rec
 Rec	 Rec
 A/Ext Link	 Red
 B	 Green
 C/Create Chapter	 Yellow
 Audio	 Dual
 Power Tv	 Shift + Power
 AV Tv	 Eject
 CH+ Tv	 Shift + Ch +

Original	Substitut
 CH- Tv	 Shift + Ch -
 Volume+ Tv	 Vol +
 Volume- Tv	 Vol -

