
 



 
 





 

 








 


 
 


 




Original	Substitut	Original	Substitut
 Power	 Power	 Recall	 Pre Ch
 Tv	 TV/R	 Vol+	 Vol +
 P.Mode	 Format	 Vol-	 Vol -
 S.Mode	 Dual	 Mute	 Mute
 Sleep	 Sleep	 Source	 AV
 Aspect	 3D	 Ch+	 Ch +
 1	 1	 Ch-	 Ch -
 2	 2	 MTS	 Media
 3	 3	 C.C	 Text
 4	 4	 Info/Display	 Info
 5	 5	 Menu	 Menu
 6	 6	 Return	 Back
 7	 7	 Ch.List	 List
 8	 8	 Exit	 Exit
 9	 9	 Up	 Up
 0	 0	 Down	 Down
 -/--	 Guide	 Right	 Right





Original	Substitut	Original	Substitut
	Left		Left
	Enter		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	V-Chip		Options
	Fav.Ch		Shift + Pre Ch
	Fav.+		>>
	Fav.-		<<
	Add/Erase		Shift + Exit
	Auto		D. Menu
	HDMI		Smart
	VGA		Subt
	COMP		Eject

Original	Substitut

