 

 


 

 

 
 
 
 
 
 
 


 
 
 


 


 
 





 

 

 
 
 



 
 
 

 

 
 
 
 
 

 
 



 
 
 
 

 






| Original | Substitut | Original | Substitut |
|--|---|---|--|
|  Standby/On |  Power |  Prog- |  Ch - |
|  Input Select |  AV |  Timer/Prog |  Sleep |
|  HDMI |  D. Menu |  [i+] |  Info |
|  Open/Close/Eject |  Eject |  Text |  Text |
|  1 |  1 |  Variable Skip/→ |  Media |
|  2 |  2 |  Variable Replay/→ |  Smart |
|  3 |  3 |  Guide |  Guide |
|  4 |  4 |  Top Menu |  Shift + Menu |
|  5 |  5 |  Menu/List |  Menu |
|  6 |  6 |  Display |  Shift + Info |
|  7 |  7 |  Return/Back |  Back |
|  8 |  8 |  Up |  Up |
|  9 |  9 |  Down |  Down |
|  0 |  0 |  Right |  Right |
|  Setup |  Options |  Left |  Left |
|  Clear |  Exit |  Enter/OK |  Ok |
|  Prog+ |  Ch + |  Red |  Red |

| Original | Substitut | Original | Substitut |
|--|---|---|--|
|  Standby/On |  Power |  Prog- |  Ch - |
|  Input Select |  AV |  Timer/Prog |  Sleep |
|  HDMI |  D. Menu |  [i+] |  Info |
|  Open/Close/Eject |  Eject |  Text |  Text |
|  1 |  1 |  Variable Skip/→ |  Media |
|  2 |  2 |  Variable Replay/→ |  Smart |
|  3 |  3 |  Guide |  Guide |
|  4 |  4 |  Top Menu |  Shift + Menu |
|  5 |  5 |  Menu/List |  Menu |
|  6 |  6 |  Display |  Shift + Info |
|  7 |  7 |  Return/Back |  Back |
|  8 |  8 |  Up |  Up |
|  9 |  9 |  Down |  Down |
|  0 |  0 |  Right |  Right |
|  Setup |  Options |  Left |  Left |
|  Clear |  Exit |  Enter/OK |  Ok |
|  Prog+ |  Ch + |  Red |  Red |





| Original | Substitut |
|---|---|
|  Green |  Green |
|  Yellow/System |  Yellow |
|  Blue/Search |  Blue |
|  << |  << |
|  Play |  Play |
|  >> |  >> |
|  I<< |  I<< |
|  Stop |  Stop |
|  >>I |  >>I |
|  Pause |  Pause |
|  VCR |  Shift + 1 |
|  HDD |  Shift + 2 |
|  DVD |  Shift + 3 |
|  Time Shift |  List |
|  Dubbing |  Pre Ch |
|  Rec Speed |  3D |
|  Rec |  Rec |

| Original | Substitut |
|---|--|
|  Subtitle |  Subt |
|  1.3x/0.8xPlay |  Format |
|  Audio |  Dual |
|  Sat.Link |  TV/R |
|  A1 |  Shift + Subt |

