










 

 

 
 


 

 



 












 



 


 
 



 



 
 


 
 








 




Original	Substitut	Original	Substitut
 Power	 Power	 Prog+	 Ch +
 1	 1	 Prog-	 Ch -
 2	 2	 Menu	 Menu
 3	 3	 List	 List
 4	 4	 Back	 Back
 5	 5	 Exit	 Exit
 6	 6	 Up	 Up
 7	 7	 Left	 Left
 8	 8	 OK	 Ok
 9	 9	 Right	 Right
 0	 0	 Down	 Down
 EPG	 Guide	 Red / Timer	 Red
 Info	 Info	 Red / Timer	 AV
 Vol+	 Vol +	 Green / FAV	 Green
 Vol-	 Vol -	 Green / FAV	 Pre Ch
 Mute	 Mute	 Yellow / Repeat	 Yellow
 TV / Radio	 TV/R	 Blue / Goto	 Blue





	Original	Substitut		Original	Substitut
	Audio	 Dual			
	SUB	 Subt			
	Yellow / Repeat	 +  Shift + Text			
	Text	 Text			
	File	 Media			
	Play	 Play			
	Pause	 Pause			
	Stop	 Stop			
	Rec	 Rec			
	I<< PREV	 I<<			
	>>I NEXT	 >>I			
	<< REW	 <<			
	>> FWD	 >>			

