



Original	Substitut	Original	Substitut
 Standby / On	 Power	 TRK. -	 Ch -
 1	 1	 Open / Close	 Eject
 2	 2	 Timer Rec	 Shift + AV
 3	 3	 I<<	 I<<
 4	 4	 F.Adv / Skip	 3D
 5	 5	 Marker	 Pre Ch
 6	 6	 >>I	 >>I
 7	 7	 <<	 <<
 8	 8	 Stop	 Stop
 9	 9	 Play/Pause	 Play
 0	 0	 >>	 >>
 IPC	 Red	 Title List / Disc Menu	 D. Menu
 Audio	 Dual	 Menu	 Menu
 Select DVD	 Smart	 Anykey	 Green
 Select VCR	 Media	 Play List / Title Menu	 List
 Input Select	 AV	 Up	 Up
 TRK. +	 Ch +	 Left	 Left

Original	Substitut	Original	Substitut
 TV	 MUTE	 CH	 SHIFT
 DVD	 SAT	 AUX	 REC MODE
 PLAY MODE	 DUAL	 SUBT	 OPT
 DISC NAV	 SOUND	 AD	 SETTINGS
 LIST	 SEARCH	 PICTURE	 ECO
 PROG	 TV/R	 FORMAT	 3D
 SLEEP	 REPEAT	 ZOOM	 TIMER
 E-MANUAL	 TEXT	 FAV	 AV
 D.MENU	 PRE-CH	 TOP MENU	 DISPLAY
 MENU	 OK	 INFO	
 CLEAR	 EXIT	 RETURN	 BACK
 VOL +	 HOME	 SMART	 CH +
 VOL -	 APP	 MEDIA	 CH -
 1	 2	 3	
 4	 5	 6	
 7	 8	 9	
 GUIDE	 0	 PRE-CH	
 A	 B	 C	 D
			
www.mandis.tv			



