










 














 
 






Original	Substitut	Original	Substitut
	Power		Power
	Source		AV / Input / RDS
	Sleep		Sleep / Timer
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/- / +10		Guide / EPG / -/-
	Recall		Back / Return
	P-Mode		Picture / Format

Original	Substitut	Original	Substitut
	S-Mode		Sound / Title
	Nicam / Audio		Audio / Lang I/II
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Red / Program		Red / Netflix / Search
	Red / Program		TV/Radio /
	Green / Goto		Green / APP / Repeat
	Yellow / Angle		Yellow / YouTube / Repeat
	Blue / USB/Card		Blue / Prime Video / Random
	Subtitle		Subtitle / EQ
	Info		Info / Angle
	Menu / Exit		Menu / Home
	Menu / Exit		Exit / Cancel / Clear
	+ / FAV+		Vol+





Original	Substitut
Canales / Repeat	Display / Media
EPG /	+  Shift + Guide / EPG / -/-
EPG /	D.Menu / Top
- / FAV-	Vol-
FAV / AB	Fav / Marker / PC
Teletext / Eject	Eject / Surround
Teletext / Eject	Text / Goto
Play/Pause / Mix	Play / Slow
Play/Pause / Mix	Pause / Step / Freeze
Stop / Hold	Stop / Hold
DVD-Setup	Setup / OPT /
<< / Index	<< / Tune-
Up / P.Up	+  Shift + Up
>> / Size	>> / Tune+
Left / Cancel	+  Shift + Left
OK / Reveal	+  Shift + OK
Right / Clock	+  Shift + Right

Original	Substitut
I<< / TV/Radio	I<< / Preset-
Down / P.Down	+  Shift + Down
>>I / Subpage	>>I / Preset+

