 

 

 
 

 

 



 










 






 



 







 



























 

 



 


 
 


 



 







| Original  | Substitut  |
|---|--|
|    |  AV / Input / RDS     |
|    |  Power                |
|    |  1                    |
|    |  2                    |
|    |  3                    |
|    |  4                    |
|    |  5                    |
|    |  6                    |
|    |  7                    |
|    |  8                    |
|   |  9                   |
|  |  Guide / EPG / -/-- |
|  |  0                  |
|  |  Back / Return      |
|  |  Setup / OPT /      |
|  |  Smart / List       |
|  |  Fav / Marker / PC  |

| Original  | Substitut   |
|---|---|
|    |  Info / Angle      |
|    |  Vol+              |
|    |  Mute / Dimmer     |
|    |  CH+ / Page+       |
|    |  Vol-              |
|    |  Picture / Format  |
|    |  CH- / Page-       |
|    |  Audio / Lang I/II |
|    |  Sound / Title     |
|    |  D.Menu / Top      |
|   |  Sleep / Timer    |
|  |  Up              |
|  |  Left            |
|  |  OK              |
|  |  Right           |
|  |  Menu / Home     |
|  |  Down            |





|  | Original   | Substitut  |  | Original | Substitut |
|--|------------|--|--|----------|-----------|
|                                 | Exit       |  Exit / Cancel / Clear  |  |          |           |
|                                 | Red        |  Red / Netflix / Search   |  |          |           |
|                                 | Green      |  Green / APP / Repeat   |  |          |           |
|                                 | Yellow     |  Yellow / YouTube / Repeat  |  |          |           |
|                                 | Blue       |  Blue / Prime Video / Random  |  |          |           |
|                                 | Teletext   |  Text / Goto  |  |          |           |
|                                 | Subtitle   |  Subtitle / EQ  |  |          |           |
|                                 | Size       |  Zoom / Size  |  |          |           |
|                                 | Subpage    |  Eject / Surround   |  |          |           |
|                                 | Index      |  Display / Media  |  |          |           |
|                                 | Hold       |  +  Shift + Stop / |  |          |           |
|                                | Reveal     |  TV/Radio /  |  |          |           |
|                               | Freeze     |  Pause / Step / Freeze  |  |          |           |
|                               | I<<        |  I<< / Preset-  |  |          |           |
|                               | Stop       |  Stop / Hold  |  |          |           |
|                               | Play/Pause |  Play / Slow  |  |          |           |
|  | >>I        |  >>I / Preset+  |  |          |           |

|  | Original | Substitut |
|--|----------|-----------|
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |
|  |          |           |

