



Original	Substitut	Original	Substitut
	Power		Power
	OPC		Smart
	Sleep		Sleep
	Select		Shift + Ok
	[i+]		Info
	[[<>]]		Format
	AV Mode		Shift + AV
	Mute		Options
	Fast Forward		Shift + Options
	Card		Media
	REC Stop		Rec
	3D-Y/C		Shift + 3
	1		1
	2		2
	3		3
	4		4
	5		5

Original	Substitut	Original	Substitut
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	DTV		TV/R
	[...]		Subt
	[≡?]		3D
	[≡i]		Shift + Info
	[≡]		Text
	Sound		Dual
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -





	Original	Substitut	Original	Substitut
	Input	TIMER AV		AV
	DTV Menu	E-MANUAL D.MENU		D. Menu
	Menu	TOP MENU MENU		Menu
	Guide			Guide
	List	DISC NAV LIST		List
	Up			Up
	Left			Left
	Right			Right
	OK			Ok
	Down			Down
	Exit	CLEAR EXIT		Exit
	Return	RETURN BACK		Back
	Red	A		Red
	Green	B		Green
	Yellow	C		Yellow
	Blue	D		Blue

