






 



 

 

 

 

 

 

 

 

 

 

 









 


 
 

 


 

 
 

 



 
 


 















Original	Substitut	Original	Substitut
 Power	 Power	 Prog-	 Ch -
 Open / Close	 Eject	 Input Select	 AV
 1	 1	 TV / DVD	 TV/R
 2	 2	 Top Menu	 Shift + Menu
 3	 3	 Menu	 Menu
 4	 4	 System Menu	 D. Menu
 5	 5	 Title List	 List
 6	 6	 Timer	 Sleep
 7	 7	 Display	 Info
 8	 8	 Timer List	 Mute
 9	 9	 Up	 Up
 0	 0	 Left	 Left
 Audio	 Dual	 Enter	 Ok
 Set	 Smart	 Right	 Right
 Subtitle	 Subt	 Down	 Down
 Angle	 Media	 Return	 Back
 Prog+	 Ch +	 Options	 Options

Original	Substitut	Original	Substitut
 Power	 MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 PLAY MODE	 REC MODE	 AV	
 FF	 II	 ■	 ●
 DISC NAV	 SOUND	 AD	 SETTINGS
 LIST	 DUAL	 SUBT	 OPT
 PROG	 SEARCH	 PICTURE	 ECO
 SLEEP	 TV/R	 FORMAT	 3D
 E-MANUAL	 REPEAT	 ZOOM	 TIMER
 D.MENU	 TEXT	 ▲	 AV
 TOP MENU	 MENU	 INFO	
 CLEAR	 EXIT	 RETURN	 BACK
 VOL +	 HOME	 SMART	 CH +
 VOL -	 APP	 MEDIA	 CH -
 1	 2	 3	
 4	 5	 6	
 7	 8	 9	
 GUIDE	 0	 PRE-CH	
 A	 B	 C	 D
			
<a href="http://www.mandis.tv">www.mandis.tv</a>			





Original	Substitut	Original	Substitut
	I<<		I<<
	>>I		>>I
	■		Vol -
	▶		Vol +
	<< / <   / <		<<
	Play		Play
	>> /  > /   >		>>
	Time / Text		Text
	Pause		Pause
	Stop		Stop
	Rec		Rec
	Rec Stop		Shift + Stop
	Rec Mode		Shift + Rec
	Synchro Rec		Red
	TV Power		Shift + Power
	TV Input		Shift + AV
	TV Prog+		Shift + Ch +

