







 

 

 
 

 


 






 


 

 





 

 

 














	Original	Substitut		Original	Substitut
	Standby - On		Power		CH -
	1		1		Down
	2		2		OK
	3		3		Right
	4		4		Left
	5		5		Play
	6		6		Select
	7		7		Edit
	8		8		Stop
	9		9		Rec
	0		0		Pause
	Browser		Smart		I<<
	Timer		Sleep		>>I
	Menu System		Menu		Return
	Menu Disc		D. Menu		Red
	Up		Up		Green
	CH+		Ch +		Yellow

	Original	Substitut		Original	Substitut
	CH -		Ch -		TV
	Down		Down		DVD
	OK		Ok		SAT
	Right		Right		AUX
	Left		Left		PLAY MODE
	Play		Play		REC MODE
	Select		Info		TV
	Edit		TV/R		DUAL
	Stop		Stop		SUBT
	Rec		Rec		OPT
	Pause		Pause		AD
	I<<		I<<		SOUND
	>>I		>>I		PICTURE
	Return		Back		ECO
	Red		Red		3D
	Green		Green		FORMAT
	Yellow		Yellow		TIMER







 

 
 



 


 

 


 



 










 

 








 





 



 

	Original	Substitut		Original	Substitut
		Blue		Blue	
		Tv Vol+		Vol +	
		Tv Vol-		Vol -	
		T/C		Guide	
		Rec Mode		Shift + Rec	
		Tuner		Subt	
		TV / DVD		AV	

	Original	Substitut		Original	Substitut





Original	Substitut	Original	Substitut
 Standby - On	 Power	 Rec	 Rec
 1	 1	 Return	 Back
 2	 2	 Red	 Red
 3	 3	 Green	 Green
 4	 4	 Yellow	 Yellow
 5	 5	 Blue	 Blue
 6	 6	 Tuner	 Subt
 7	 7	 T/C	 Guide
 8	 8	 Tv Vol+	 Vol +
 9	 9	 Tv Vol-	 Vol -
 0	 0	 TV / DVD	 TV/R
 Timer	 Sleep	 Menu System	 Menu
 Up	 Up		
 CH+	 Ch +		
 CH-	 Ch -		
 Down	 Down		
 OK	 Ok		

Original	Substitut	Original	Substitut
 Standby - On	 Power	 Rec	 Rec
 1	 1	 Return	 Back
 2	 2	 Red	 Red
 3	 3	 Green	 Green
 4	 4	 Yellow	 Yellow
 5	 5	 Blue	 Blue
 6	 6	 Tuner	 Subt
 7	 7	 T/C	 Guide
 8	 8	 Tv Vol+	 Vol +
 9	 9	 Tv Vol-	 Vol -
 0	 0	 TV / DVD	 TV/R
 Timer	 Sleep	 Menu System	 Menu
 Up	 Up		
 CH+	 Ch +		
 CH-	 Ch -		
 Down	 Down		
 OK	 Ok		

