 

 
 
 
 
 
 
 
 
 

 
 
 
 

 

 
 
 

 

 
 
 

 
 

 


 





 









 






 

 
 
 
 



 




Original	Substitut	Original	Substitut
	Power		Power
	P.Mode		Format
	S.Mode		Shift + Dual
	Mute		Mute
	Auto		Smart
	-/--		Shift + Guide
	Sleep		Sleep
	Display		Info
	Audio / Nicam		Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV
	Recall		Back
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Vol+		Vol +
	Vol-		Vol -
	TV Menu		Menu
	Exit		Exit
	<< / Text		<<
	<< / Text		Text





Original	Substitut	Original	Substitut
>> / Hold	>>		
Stop / Subpage	Stop		
Play/Pause /	Play		
Play/Pause /	Pause		
I<< / Index	I<<		
>>I / Size	>>I		
Red	A Red		
Green	B Green		
Yellow	C Yellow		
Blue	D Blue		
Fav	Pre Ch		
Fav-	Shift + Left		
Fav+	Shift + Right		
TV / Radio	TV/R		
EPG	Guide		
Subtitle	Subt		

Original	Substitut	Original	Substitut

