



Original	Substitut	Original	Substitut
 Open / Close	 Eject / Surround	 8	 8
 Power	 Power	 9	 9
 V.Mode	 Picture / Format	 OSD	 Display / Media
 Title	 Sound / Title	 N/P	 Red / Netflix / Search
 Subtitle	 Subtitle / EQ	 0	 0
 Menu	 Menu / Home	 Setup	 Setup / OPT /
 Repeat	 Green / APP / Repeat	 Up	 Up
 A-B RPT	 Yellow / YouTube / Repeat	 Intro	 OK
 Angle	 Info / Angle	 Left	 Left
 Audio	 Audio / Lang I/II	 Play	 Play / Slow
 1	 1	 Right	 Right
 2	 2	 Zoom	 Zoom / Size
 3	 3	 Down	 Down
 4	 4	 Prog	 TV/Radio /
 5	 5	 CH+	 CH+ / Page+
 6	 6	 Rec	 Rec / Rec Mode
 7	 7	 CH-	 CH- / Page-





Original		Substitut	
	Timer		Sleep / Timer
	Quality		Blue / Prime Video / Random
	Disc		D.Menu / Top
	<<		<< / Tune-
	>>		>> / Tune+
	l<<		l<< / Preset-
	>>l		>>l / Preset+
	Pause / Step		Pause / Step / Freeze
	Stop		Stop / Hold
	<l Slow		Shift + Left
	Slow l>		Shift + Right
	DVD		Shift + 2
	Mute		Mute / Dimmer
	Volume-		Vol-
	Volume+		Vol+
	Source		AV / Input / RDS
	Book Mark		Fav / Marker / PC

Original		Substitut	
	Edit		Text / Goto
	Chap Mark		Smart / List

