









































Original	Substitut	Original	Substitut
 Power	 Power	 CH+	 CH+ / Page+
 Mute	 Mute / Dimmer	 Vol-	 Vol-
 1	 1	 Source	 AV / Input / RDS
 2	 2	 CH-	 CH- / Page-
 3	 3	 Up	 Up
 4	 4	 Left	 Left
 5	 5	 OK	 OK
 6	 6	 Right	 Right
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 Down	 Down
 9	 9	 Menu	 Menu / Home
 PR List	 Smart / List	 Aspect	 Shift + Picture / Format
 0	 0	 Sleep	 Sleep / Timer
 Recall	 Back / Return	 Info/Display	 Info / Angle
 Vol+	 Vol+	 I/II/Nicam	 Shift + Audio / Lang I/II
 P.Mode	 Picture / Format	 DVD/USB	 Shift + 2
 S.Mode	 Sound / Title	 Text	 Text / Goto





Original		Substitut	
	Subtitle		Subtitle / EQ
	Size		Zoom / Size
	Play/Pause/Index		Play / Slow
	Stop/Reveal		Stop / Hold
	Step/Subpage		Pause / Step / Freeze
	Open/Close/Hol		Eject / Surround
	I<</FAV		I<< / Preset-
	>>ITv/Radio		Shift + >> /
	<</Audio		<< / Tune-
	>>/EPG		>> / Tune+
	Red/Prog		Red / Netflix / Search
	Green/Zoom		Green / APP / Repeat
	Yellow/Title		Yellow / YouTube / Repeat
	Blue/DVD-Setup		Blue / Prime Video / Random
	DVD-Menu		D.Menu / Top
	Repeat		Shift + Green / APP / Repeat
	A-B		Shift + Yellow / YouTube / Repeat

Original		Substitut	
	DVD-Lang		Audio / Lang I/II

