



Original	Substitut	Original	Substitut
	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	PRE-CH		Pre Ch
	TV		TV/R
	CH.MGR		Back
	Sleep		Sleep

Original	Substitut	Original	Substitut
	PC		Media
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	[≡+]/PIP		3D
	[≡?]/Info		Info
	[≡]/[/≡]/TTX/MIX		Text
	Red-/I/I-/P.Mode		Red





Original	Substitut
Green/-I/I-/S. Mode	Green
Yellow/Still	Yellow
Blue/P.Size	Blue
[≡◆]/Source	+ Shift + AV
[≡◇]/Swap	Options
Size	Format
I-II/Dual	Dual
(o)/SRS	Subt
[←]/Position	Smart
P Up	>>
P Down	<<

Original	Substitut

