



Original		Substitut		Original		Substitut	
	Power		Power		Menu		Menu / Home
	Mute		Mute / Dimmer		Left / Vol-		Left
	1		1		Left / Vol-		Vol-
	2		2		OK / List		OK
	3		3		OK / List		Smart / List
	4		4		Right / Vol+		Vol+
	5		5		Right / Vol+		Right
	6		6		FAV		Fav / Marker / PC
	7		7		Down / PR-		CH- / Page-
	8		8		Down / PR-		Down
	9		9		Exit		Exit / Cancel / Clear
	TV / Radio		TV/Radio /		Red / Find		Red / Netflix / Search
	0		0		↑		>>  / Preset+
	←PR		Back / Return		↑		>> / Tune+
	EPG		Guide / EPG / -/--		Green / Zoom		Zoom / Size
	Up / PR+		CH+ / Page+		Green / Zoom		Green / APP / Repeat
	Up / PR+		Up		↓		<< / Tune-





Original	Substitut
	PRESET- I<< / Preset-
	Blue / LR Prime Video RANDOM
	Blue / LR LANG I/II AUDIO
	Yellow / TXT GOTO TEXT
	Yellow / TXT YouTube REPEAT A-B
	Pause / Step / Freeze STEP-FREEZE II
	Shift + 0 SHIFT + HDMI-SAT 0
	Display / Media MEDIA DISPLAY
	AV / Input / RDS RDS AV INPUT
	Sleep / Timer TIMER SLEEP
	Picture / Format FORMAT PICTURE
	Info / Angle ANGLE INFO

Original	Substitut

