



Original	Substitut	Original	Substitut
Power DVD	Power	CH-	Ch -
Direct Tv Rec	TV/R	ShowView	Blue
Drive Select HDD	Media	Manual Skip	Subt
Drive Select DVD	Smart	Skip	I<<
1	1	Skip	>>I
2	2	Slow/Search	<<
3	3	Slow/Search	>>
4	4	Stop	Stop
5	5	Pause	Pause
6	6	Play/x1.3	Play
7	7	Direct Navigator/Top	Menu
8	8	Functions	Options
9	9	Sub Menu	D. Menu
0	0	Return	Back
* Cancel	Guide	Up	Up
Input Select	AV	Down	Down
CH+	Ch +	Right /	Right

Original	Substitut	Original	Substitut
CH-	Ch -	CH	Ch -
ShowView	Blue	D	Blue
Manual Skip	Subt	Subt	Subt
Skip	I<<	Skip	I<<
Skip	>>I	Skip	>>I
Slow/Search	<<	Slow/Search	<<
Slow/Search	>>	Slow/Search	>>
Stop	Stop	Stop	Stop
Pause	Pause	Pause	Pause
Play/x1.3	Play	Play/x1.3	Play
Direct Navigator/Top	Menu	Top Menu	Menu
Functions	Options	Settings	Options
Sub Menu	D. Menu	E-Manual	D. Menu
Return	Back	Return	Back
Up	Up	Up	Up
Down	Down	Down	Down
Right /	Right	Right /	Right



