







 



 

 























Original	Substitut
	 Power
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Option / Setup / OPT /
	 [   ] Guide / EPG / -/--
	 Up
	 Left
	 OK
	 Right
	 Down
	 Menu/Browse / Menu / Home
	 [ = ] Text / Goto
	 Vol+
	 P+ / CH+ / Page+
	 Vol-

Original	Substitut
	 Mute / Dimmer
	 P- / CH- / Page-
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 AV / Input / RDS
	 0
	 P<P / Back / Return
	 << / Tune-
	 Stop/Cancel / Exit / Cancel / Clear
	 Stop / Hold


















Original		Substitut	
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	[i+]		Info / Angle
	[12]		Display / Media
	FAV		Fav / Marker / PC

Original		Substitut	





Original	Substitut	Original	Substitut
	Power		Power
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Menu		Menu / Home
	P+		CH+ / Page+
	P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Original	Substitut	Original	Substitut
	9		9
	0		0
	P+P		Fav / Marker / PC
	<<		<< / Tune-
	Stop/Cancel		Stop / Hold
	Play		Play / Slow
	>>		>> / Tune+
	Info		Info / Angle
	Subtitle		Subtitle / EQ
	Back		Back / Return
	Pause		Pause / Step / Freeze





Original	Substitut
	 Power
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Guide / EPG / -/--
	 Up
	 Left
	 OK
	 Right
	 Down
	 Menu / Home
	 Text / Goto
	 CH+ / Page+
	 CH- / Page-
	 1
	 2

Original	Substitut
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Fav / Marker / PC
	 << / Tune-
	 Stop / Hold
	 Play / Slow
	 >> / Tune+
	 Rec / Rec Mode
	 Info / Angle
	 Zoom / Size
	 Subtitle / EQ





Original	Substitut	Original	Substitut
Back	Back / Return		
Pause	Pause / Step / Freeze		

