




 

 

 




 







Original	Substitut	Original	Substitut
	Power		Power
	Display		Display / Media
	Setup		Setup / OPT /
	Mute		Mute / Dimmer
	Menu		Menu / Home
	Music		Sound / Title
	Copy		Fav / Marker / PC
	Zoom		Zoom / Size
	TV System		TV/Radio /
	Browser		Info / Angle
	Vol-		Vol-
	Vol+		Vol+
	Guide		Guide / EPG / -/-
	Return		Back / Return
	Up		Up
	Left		Left
	Enter		OK

Original	Substitut	Original	Substitut
	Right		Right
	Down		Down
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Time Shift		Picture / Format
	0		0
	Goto		Text / Goto
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold





Original	Substitit	Original	Substitit
[TIMER]	Timer	[SLEEP]	Sleep / Timer
[PAUSE/STEP]	Pause/Step	[STEP-FREEZE]	Pause / Step / Freeze
[SLOW]	I>/Slow	[SURROUND]	Eject / Surround
[PREV]	I<<	[PRESET-]	I<< / Preset-
[RECLIST]	Rec List	[LIBT SMART]	Smart / List
[INS REPLAY]	←/INS Replay	[CH PAGE -]	CH- / Page-
[CM SKIP]	→/CM Skip	[CH PAGE +]	CH+ / Page+
[NEXT]	>>I	[PRESET+]	>>I / Preset+
[A-B]	A-B	[YouTube REPEAT A-B]	Yellow / YouTube / Repeat
[SUBTITLE]	Subtitle	[EQ SUBTITLE]	Subtitle / EQ
[REPEAT]	Repeat	[APP REPEAT]	Green / APP / Repeat
[FR]	<<	[TUNE-]	<< / Tune-
[F1]	F1	[TOP MENU D.MENU]	D.Menu / Top
[SOURCE]	Source	[RDS AV INPUT]	AV / Input / RDS
[AUDIO]	Audio	[LANG I/II AUDIO]	Audio / Lang I/II
[FF]	>>	[TUNE+]	>> / Tune+

Original	Substitit

