 





 

 



 






 

 

 

 



 




 
 
 
 


 

 

 


 
 

 
 

 


 





 
 
 







Original	Substitut
 MUTE	 Mute
 POWER	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TEXT	 Text
 HOLD	 Shift + Stop
 SUBPAGE	 Subt
 FAV	 Pre Ch
 AUDIO	 Dual

Original	Substitut
 MENU	 Menu
 UP	 Up
 INPUT	 AV
 LEFT	 Left
 OK	 Ok
 RIGHT	 Right
 BACK	 Back
 DOWN	 Down
 EXIT	 Exit
 VOL+	 Vol +
 SLEEP	 Sleep
 CH+	 Ch +
 VOL-	 Vol -
 CH-	 Ch -
 RED	 Red
 GREEN	 Green
 YELLOW	 Yellow





Original	Substitut
 BLUE	 Blue
 S.MODE	 Shift + Dual
 S	 Smart
 MIX	 Shift + Text
 SIZE	 Eject
 RETURN	 Shift + Back
 GUIDE	 Guide
 TV/RADIO	 TV/R
 PLAY	 Play
 PAUSE	 Pause
 STOP	 Stop
 RECORD	 Rec
 PREV	 I<<
 NEXT	 >>I
 REW	 <<
 FWD	 >>
 INDEX	 D. Menu

Original	Substitut
 LIST	 List
 INFO	 Info
 P.MODE	 Shift + Format
 REVEAL	 Media
 PROG	 Shift + Sleep
 ASPECT	 Format

