 








 





 
 

 



 



 


 



 





 


 



 



 










Original	Substitut	Original	Substitut
 Power TV	 Power	 Test	 Text
 Home Theater	 Media	 Delay	 Format
 Home Theater	 Smart	 Level	 3D
 Tape	 Red	 -	 Ch -
 CD	 Yellow	 +	 Ch +
 Tuner/Band	 Green	 1 Tv	 1
 DVD	 Blue	 2 Tv	 2
 Up	 Up	 3 Tv	 3
 Left	 Left	 4 Tv	 4
 Select	 Ok	 5 Tv	 5
 Right	 Right	 6 Tv	 6
 Down	 Down	 7 Tv	 7
 Display	 Info	 8 Tv	 8
 Menu	 Menu	 9 Tv	 9
 Stereo	 Dual	 0 Tv	 0
 Surround	 Subt	 >10 Tv	 Guide
 SFC	 Options	 CH-	 Shift + Ch -







 



 







 





 




 








Original		Substitut	
	CH+	 + 	Shift + Ch +
	Tv/Video		AV
	Disc/Deck 1/2		D. Menu
	Muting		Mute
	Vol-		Vol -
	Vol+		Vol +

Original		Substitut	





Original	Substitut	Original	Substitut
 Power DVD	 Power	 Menu	 Menu
 Home Theater	 Media	 Stereo	 Dual
 Home Theater	 Smart	 Surround	 Subt
 Tape	 Red	 SFC	 Options
 CD	 Yellow	 Test	 Text
 Tuner/Band	 Green	 Delay	 Format
 DVD	 Blue	 Level	 3D
 Play DVD	 Play	 -	 Ch -
 I<</<< DVD	 <<	 +	 Ch +
 Stop DVD	 Stop	 1 DVD	 1
 >>/>>I DVD	 >>	 2 DVD	 2
 Up	 Up	 3 DVD	 3
 Left	 Left	 4 DVD	 4
 Select	 Ok	 5 DVD	 5
 Right	 Right	 6 DVD	 6
 Down	 Down	 7 DVD	 7
 Display	 Info	 8 DVD	 8





	Original		Substitut
	9 DVD		9
	0 DVD		0
	>10 DVD		Guide
	CH-		Shift + Ch -
	CH+		Shift + Ch +
	Disc/Deck 1/2		List
	Muting		Mute
	Vol-		Vol -
	Vol+		Vol +

	Original		Substitut






 


 



 

 


Original	Substitut
 Power CD	 Power
 Power Tape	 Shift + Power
 Home Theater	 Media
 Home Theater	 Smart
 Tape	 Red
 CD	 Yellow
 Tuner/Band	 Green
 DVD	 Blue
 Play Tape	 Shift + Play
 Play CD	 Play
 I<</<< Tape	 Shift + <<
 I<</<< CD	 <<
 Stop Tape	 Shift + Stop
 Stop CD	 Stop
 >>/>>I Tape	 Shift + >>
 >>/>>I CD	 >>
 Up	 Up

Original	Substitut
 Left	 Left
 Select	 Ok
 Right	 Right
 Down	 Down
 Display	 Info
 Menu	 Menu
 Stereo	 Dual
 Surround	 Subt
 SFC	 Options
 Test	 Text
 Delay	 Format
 Level	 3D
 -	 Ch -
 +	 Ch +
 Direct Tuning/Disc Enter	 D. Menu
 1 CD-Tape	 1
 2 CD-Tape	 2





	Original	Substitut		Original	Substitut
	3 CD-Tape		3		
	4 CD-Tape		4		
	5 CD-Tape		5		
	6 CD-Tape		6		
	7 CD-Tape		7		
	8 CD-Tape		8		
	9 CD-Tape		9		
	0 CD-Tape		0		
	>10 CD-Tape		Guide		
	CH-		Shift + Ch -		
	CH+		Shift + Ch +		
	Disc/Deck 1/2		List		
	Disc/Deck 1/2		Shift + List		
	Muting		Mute		
	Vol-		Vol -		
	Vol+		Vol +		

 




Original	Substitut	Original	Substitut
 Power VCR	 Power	 Display	 Info
 Power Tuner/Band	 +  Shift + Power	 Menu	 Menu
 Home Theater	 Media	 Stereo	 Dual
 Home Theater	 Smart	 Surround	 Subt
 Tape	 Red	 SFC	 Options
 CD	 Yellow	 Test	 Text
 Tuner/Band	 Green	 Delay	 Format
 DVD	 Blue	 Level	 3D
 Play	 Play	 -	 Ch -
 I<</<<	 <<	 +	 Ch +
 Stop	 Stop	 Direct Tuning/Disc Enter	 D. Menu
 >>/>>I	 >>	 1 VCR	 1
 Up	 Up	 1 Tuner/Band	 +  Shift + 1
 Left	 Left	 2 VCR	 2
 Select	 Ok	 >10 VCR	 Guide
 Right	 Right	 2 Tuner/Band	 +  Shift + 2
 Down	 Down	 3 VCR	 3





	Original		Substitut	
	3 Tuner/Band		+ 	Shift + 3
	4 VCR			4
	4 Tuner/Band		+ 	Shift + 4
	5 VCR			5
	5 Tuner/Band		+ 	Shift + 5
	6 VCR			6
	6 Tuner/Band		+ 	Shift + 6
	7 VCR			7
	7 Tuner/Band		+ 	Shift + 7
	8 VCR			8
	8 Tuner/Band		+ 	Shift + 8
	9 VCR			9
	9 Tuner/Band		+ 	Shift + 9
	0 VCR			0
	0 Tuner/Band		+ 	Shift + 0
	CH-		+ 	Shift + Ch -
	CH+		+ 	Shift + Ch +

	Original		Substitut	
	Disc/Deck 1/2			List
	Muting			Mute
	Vol-			Vol -
	Vol+			Vol +
>10 button" data-bbox="511 324 544 357"/>	>10		+ 	Shift + Guide

