 







 

 

 

 

 

 

 

 

 

 

 



 
 


 
 



 
 

 
 


 
 


 
 
 
 
 
 
 
 
 
 
 
 
 


 


 
 


 

 
 
 



Original		Substitut		Original		Substitut	
	DVD/VHS Power		Power		0		0
	Drive Select		Media		*/Delete/Reset		Shift + Exit
	TV Power		Shift + Power		Input Select		AV
	TV AV		Shift + AV		CH+/Tracking/V-Lock+		Ch +
	TV CH+		Shift + Ch +		CH-/Tracking/V-Lock-		Ch -
	TV CH-		Shift + Ch -		ShowView		Smart
	TV Vol+		Vol +		Prog / Check		Sleep
	TV Vol-		Vol -		I<< Skip/Index		I<<
	1		1		Skip/Index >>I		I>>
	2		2		<<		<<
	3		3		Slow/Search/Rew		>>
	4		4		Stop		Stop
	5		5		Pause		Pause
	6		6		Play		Play
	7		7		i/Status		Info
	8		8		Exit		Exit
	9		9		Guide		Guide





Original	Substitut	Original	Substitut
 Direct Navigator	 D. Menu	 Audio	 Dual
 Function Menu	 Menu	 STTL	 Subt
 Up	 Up	 Display	 Shift + Info
 Down	 Down	 Time Slip / << Jet Rew	 Shift + <<
 Right /   >	 Right	 Time Slip / << Jet Rew	 Format
 Left / <	 Left		
 OK	 Ok		
 Option	 Options		
 Return	 Back		
 Red	 Red		
 Green	 Green		
 Yellow / Create Chapter	 Yellow		
 Blue/ Manual Skip	 Blue		
 Rec	 Rec		
 Rec Mode	 Shift + Rec		
 Ext Link	 Text		
 Direct Tv Rec	 TV/R		

Original	Substitut	Original	Substitut
 Audio	 Dual	 STTL	 Subt
 Display	 Shift + Info	 Time Slip / << Jet Rew	 Shift + <<
 Time Slip / << Jet Rew	 Format		

