


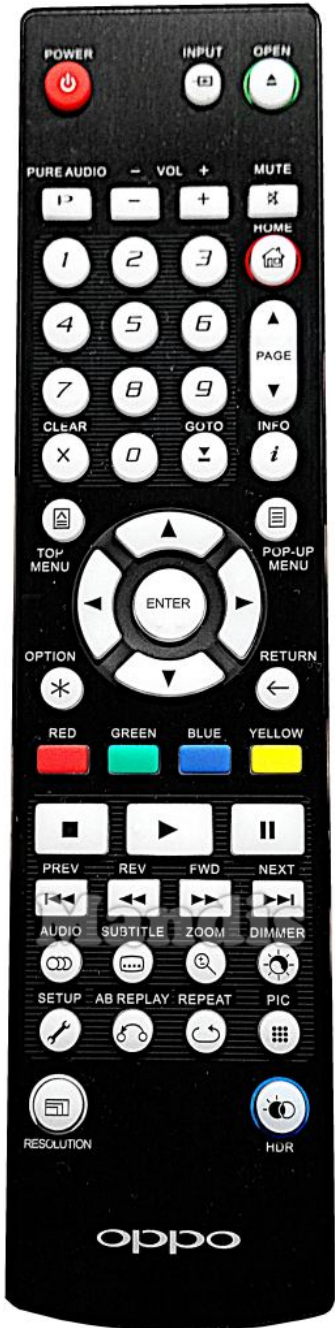


 

















 

 

 





 


 



Original		Substitut		Original		Substitut	
	Power		Power		9		9
	Input		AV / Input / RDS		Page-		CH- / Page-
	Open		Eject / Surround		Clear		Exit / Cancel / Clear
	Pure Audio		Sound / Title		0		0
	Vol-		Vol-		Goto		Text / Goto
	Vol+		Vol+		Info		Info / Angle
	Mute		Mute / Dimmer		Top Menu		D.Menu / Top
	1		1		Up		Up
	2		2		Pop-Up Menu		Shift + Menu /
	3		3		Left		Left
	Home		Menu / Home		Enter		OK
	4		4		Right		Right
	5		5		Option		Shift + Setup / OPT / Tools
	6		6		Down		Down
	Page+		CH+ / Page+		Return		Back / Return
	7		7		Red		Red / Netflix / Search
	8		8		Green		Green / APP / Repeat





Original	Substitut
 Blue	 Blue / Prime Video / Random
 Yellow	 Yellow / YouTube / Repeat
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 I<<	 I<< / Preset-
 <<	 << / Tune-
 >>	 >> / Tune+
 >>I	 >>I / Preset+
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Zoom	 Zoom / Size
 Dimmer	 Shift + Mute / Dimmer
 Setup	 Setup / OPT /
 AB Replay	 Shift + Yellow / YouTube /
 Repeat	 Shift + Green / APP /
 Pic	 Picture / Format

Original	Substitut
 Resolution	 Guide / EPG / -/--
 Light	 Fav / Marker / PC

