



Original	Substitut	Original	Substitut
	Power		Power
	TV/VCR		TV/Radio /
	DVD	+	Shift + 2
	PR+		CH+ / Page+
	1		1
	2		2
	3		3
	PR-		CH- / Page-
	4		4
	5		5
	6		6
	Vol+		Vol+
	7		7
	8		8
	9		9
	Vol-		Vol-
	0/AV		0

Original	Substitut	Original	Substitut
	0/AV		AV / Input / RDS
	Info		Info / Angle
	Setup / Menu		Setup / OPT /
	Setup / Menu		Menu / Home
	Mute		Mute / Dimmer
	Up		Up
	Left		Left
	Enter/[≡]		OK
	Enter/[≡]		Text / Goto
	Right		Right
	DVD Menu		D.Menu / Top
	Down		Down
	Cancel/[≡♦]		Exit / Cancel / Clear
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	TRK/Skip-/I<<		I<< / Preset-





Original	Substitut
TRK/Skip-/>>	>> / Preset+
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Rec/Otr	Rec / Rec Mode
Time Rec	+ Shift + Sleep / Timer
Index/[≡☺]/[≡□]	Smart / List
II>	+ Shift + Pause / Step /
Repeat	Yellow / YouTube / Repeat
Repeat	+ Shift + TV/Radio / Program
Jump/[≡+]/SP/LP	Picture / Format
Angle/00:00:00	+ Shift + Info / Angle
Subtitle/Zero	Subtitle / EQ
Zoom/[≡?]	Zoom / Size
Title/ATR	Sound / Title
Return	Back / Return
Play Mode/P->P	Display / Media
Timer	Sleep / Timer

Original	Substitut
Audio	Audio / Lang I/II
Eject	+ Shift + Eject / Surround
Open/Close	Eject / Surround

