

Original	Substitut	Original	Substitut
Power		Power	
Mute		Mute	
CD Play/Pause		Play	
CD Play/Pause		Pause	
CD Stop		Stop	
TAPE Rec		Rec	
CD ICD I<< <<		I<<	
TAPE <<		<<	
TAPE >>		>>	
CD >> >>I		>>I	
D.Skip		List	
SURR		Dual	
Program		Options	
Sleep		Sleep	
Repeat		Text	
TAPE Rev. Play		Left	
TAPE Stop		Ok	



Power button (red), MUTE, SHIFT (orange)

TV, DVD, SAT, AUX

PLAY MODE: Play, Pause, Stop, Fast Forward, Fast Reverse

REC MODE: Record

DISC NAV: List, DUAL, AD, SETTINGS: Opt, ECO, 3D, TIMER, AV

SOUND: Dual, SUBT, OPT, PROG, SEARCH, PICTURE, ECO, SLEEP, TV/R, FORMAT, 3D, E-MANUAL, REPEAT, ZOOM, TIMER, D.MENU, TEXT, Up, AV

TOP MENU: Menu, INFO, OK, CLEAR, EXIT, RETURN, BACK

VOL (+, -), HOME, SMART, APP, MEDIA, CH (+, -)

Numeric keypad (1-9, 0), GUIDE, 0, PRE-CH

Color buttons: A (red), B (green), C (orange), D (blue)

Mandis shop
www.mandis.tv