

Original	Substitut	Original	Substitut
Power		Power	
Mute		Mute	
CD Play/Pause		Play	
CD Play/Pause		Pause	
CD Stop		Stop	
TAPE Rec		Rec	
CD ICD I<< <<		I<<	
TAPE <<		<<	
TAPE >>		>>	
CD >> >>I		>>I	
D.Skip		List	
SURR		Dual	
Program		Options	
Sleep		Sleep	
Repeat		Text	
TAPE Rev. Play		Left	
TAPE Stop		Ok	



Power MUTE SHIFT

TV DVD SAT AUX

PLAY MODE REC MODE

Play Pause Stop Fast Forward Rewind

DISC NAV SOUND AD SETTINGS

LIST DUAL SUBT OPT

PROG SEARCH PICTURE ECO

SLEEP TV/R FORMAT 3D

E-MANUAL REPEAT ZOOM TIMER

D.MENU TEXT AV

TOP MENU DISPLAY

MENU INFO

OK

CLEAR RETURN

EXIT BACK

HOME

SMART

APP

MEDIA

+ VOL -

+ CH -

1 2 3

4 5 6

7 8 9

- / -- FAV

GUIDE 0 PRE-CH

A B C D

Mandis
shop

www.mandis.tv