



| Original | Substitut | Original | Substitut |
|----------|---------------|----------|-----------------------------|
| | Power | | Power |
| | Review | | Smart / List |
| | Left/ <</- | | Left |
| | Left/ <</- | | << / Preset- |
| | Right/>> /+ | | Right |
| | Right/>> /+ | | >> / Preset+ |
| | Tv/VCR | | AV / Input / RDS |
| | --:-- | | Exit / Cancel / Clear |
| | Audio | | Audio / Lang I/II |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |
| | X | | Back / Return |
| | 9 | | 9 |
| | 0 | | 0 |
| | Timer | | Sleep / Timer |
| | PR+ | | CH+ / Page+ |
| | Start Debut + | | Green / APP / Repeat |
| | Start Debut - | | Red / Netflix / Search |
| | Stop Fin + | | Blue / Prime Video / Random |
| | PR- | | CH- / Page- |
| | Stop Fin - | | Yellow / YouTube / Repeat |
| | Date- | | Vol- |
| | Date+ | | Vol+ |
| | Prog | | TV/Radio / |
| | << | | << / Tune- |
| | 30 Sec/>> | | Display / Media |
| | Timer/? | | Shift + Sleep / Timer |
| | Play | | Play / Slow |





| Original | Substitut | Original | Substitut |
|---|-----------|---|--------------------------|
|  | '1" |  | Guide / EPG / -/-- |
|  | >> |  | >> / Tune+ |
|  | Rec |  | Rec / Rec Mode |
|  | Stop |  | Stop / Hold |
|  | Pause |  | Pause / Step / Freeze |
|  | Menu |  | Menu / Home |
|  | OK |  | OK |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Tv Vol- |  | Shift + Vol- |
|  | Tv Vol+ |  | Shift + Vol+ |
|  | Tv PR- |  | Shift + CH- / |
|  | Tv PR+ |  | Shift + CH+ / |
|  | Tv/VCR Tv |  | Shift + AV / Input / RDS |
|  | Power Tv |  | Shift + Power |
|  | Mute Tv |  | Shift + Mute / Dimmer |

