



Original	Substitut	Original	Substitut
 Power	 Power	 Vol+	 Vol +
 TV/VCR - DVD	 Smart	 Vol-	 Vol -
 1	 1	 P/TRK+	 Ch +
 2	 2	 P/TRK-	 Ch -
 3	 3	 Slow+	 Shift + Ch +
 4	 4	 Slow-	 Shift + Ch -
 5	 5	 << / Index	 <<
 6	 6	 S.Mode	 Shift + Dual
 7	 7	 P.Mode	 Format
 8	 8	 >> / Mix	 >>
 9	 9	 I<<	 I<<
 0	 0	 >>I	 >>I
 -/--	 Guide	 Stop	 Stop
 Mute	 Mute	 Play / Pause	 Play
 I-II Audio	 Dual	 Play / Pause	 Pause
 TV/Text	 Text	 Red / Menu	 Red
 Input	 AV	 Red / Menu	 Menu

Original	Substitut	Original	Substitut
 MUTE	 MUTE	 SHIFT	 SHIFT
 TV	 DVD	 SAT	 AUX
 PLAY MODE	 REC MODE	 PLAY	 PAUSE
 DISC NAV	 SOUND	 AD	 SETTINGS
 LIST	 DUAL	 SUBT	 OPT
 PROG	 SEARCH	 PICTURE	 ECO
 SLEEP	 TV/R	 FORMAT	 3D
 E-MANUAL	 REPEAT	 ZOOM	 TIMER
 D.MENU	 TEXT	 AV	 AV
 TOP MENU	 DISPLAY	 MENU	 INFO
 OK	 OK	 OK	 OK
 CLEAR	 EXIT	 RETURN	 BACK
 VOL+	 HOME SMART	 VOL+	 CH+
 VOL-	 APP MEDIA	 VOL-	 CH-
 1	 2	 3	 3
 4	 5	 6	 6
 7	 8	 9	 9
 GUIDE	 0	 FAV	 PRE-CH
 A	 B	 C	 D
			
www.mandis.tv			





Original		Substitut	
	Green / DVD		Green
	Green / DVD		D. Menu
	Yellow / P.Size		Yellow
	Blue / Info		Blue
	Blue / Info		Info
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Open / Close		Eject
	Rec / Return		Rec
	Rec / Return		Back
	Pre-CH		Pre Ch
	Step		Shift + Pause
	Sleep		Sleep
	Show View		Media

Original		Substitut	
	Clear		Exit
	Angle		3D
	Repeat		Shift + Text
	SP/LP		TV/R
	Crystal PB		Options
	Zoom		Shift + Eject
	Subtitle		Subt

