























 









Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Home		Shift + Menu /
	0		0
	YouTube		Shift + Yellow / YouTube /
	Vol+		Vol+
	TV		TV/Radio /
	CH+		CH+ / Page+

Original	Substitut	Original	Substitut
	Vol-		Vol-
	Source		AV / Input / RDS
	CH-		CH- / Page-
	USB		Shift + 8
	Option		Setup / OPT /
	Info		Info / Angle
	FAV		Fav / Marker / PC
	Menu		Menu / Home
	EPG		Guide / EPG / -/--
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Exit		Exit / Cancel / Clear
	Netflix		Shift + Red / Netflix / Search





Original	Substitut
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Sleep	Sleep / Timer
Zoom-	Shift + Zoom / Zoom /
Zoom+	Zoom / Size
List	Smart / List
Text	Text / Goto
Sub	Subtitle / EQ
Recall	Shift + Back / Return
Eco	Display / Media
<<	<< / Tune-
>>	>> / Tune+
I<	I<< / Preset-
>I	>>I / Preset+
Rec	Rec / Rec Mode

Original	Substitut
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold
Audio	Audio / Lang I/II

