








Original	Substitut	Original	Substitut
	Power		Power
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Menu		Menu / Home
	Return		Back / Return
	Tv Vol+		Vol+
	CH+		CH+ / Page+
	Tv Vol-		Vol-
	CH-		CH- / Page-
	Mute Tv		Mute / Dimmer
	Input Tv		AV / Input / RDS
	1		1
	2		2
	3		3

Original	Substitut	Original	Substitut
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	ENT		Shift + OK












Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	Play/Memory		Play / Slow
	Pause/Preset		Pause / Step / Freeze
	Stop/Preset Up		Stop / Hold
	<</Tuning Up		<< / Tune-
	>>		>> / Tune+
	I<</Tuning		I<< / Preset-
	>>I		>>I / Preset+
	Music		Sound / Title
	Stereo		Audio / Lang I/II
	Surround		Eject / Surround
	Movie		Picture / Format
	Sleep		Sleep / Timer
	TV		TV/Radio /
	Sur Decode		D.Menu / Top
	Setup		Setup / OPT /

Original	Substitut	Original	Substitut
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Return		Back / Return
	Vol+		Vol+
	iPod		Smart / List
	Vol-		Vol-
	Entertainment		Display / Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6












 


Original		Substitut		Original		Substitut	
	7		7		AUX2		Shift + 2
	8		8		HDMI 3		Shift + 3
	9		9		HDMI 4		Shift + 4
	HDMI 1		Guide / EPG / -/--				
	0		0				
	HDMI 2		Fav / Marker / PC				
	Off		Shift + Power				
	Pause/Presets		Shift + Pause / Step /				
	Stop/Presets Up		Shift + Stop /				
	<</Tuning Up		Shift + << /				
	I<</Tuning		Shift + I<< / Preset-				
	Univolume		Shift + Audio / Lang I/II				
	FM		Shift + TV/Radio / Program				
	Intellibeam		Shift + D.Menu / Top Menu				
	Option		Shift + Setup / OPT / Tools				
	ENT		Shift + OK				
	AUX1		Shift + 1				





Original	Substitut	Original	Substitut
	Power		Power
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Top Menu		D.Menu / Top
	Menu		Menu / Home
	Return		Back / Return
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Original	Substitut	Original	Substitut
	9		9
	0		0
	+10		Guide / EPG / -/-
	ENT		Fav / Marker / PC
	<<		>> / Tune+
	Stop		Stop / Hold
	>>		I<< / Preset-
	I<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>I		>>I / Preset+
	Play		Play / Slow

