



Original	Substitut
Power On	Power
Power Off	Shift + Power
Mute	Mute
Stereo	Shift + Dual
Cable/Sat	Green
TV	Blue
CD	Yellow
Menu	Menu
Harman Volume	Smart
Exit	Exit
Tone Control	Back
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok
1	1

Original	Substitut
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Clear	Shift + Exit
Direct	Guide
Vol+	Vol +
Vol-	Vol -
CH/Tuner Up	Ch +
CH/Tuner Down	Ch -
Speaker 1	Options
Speaker 2	Dual





Original	Substitut	Original	Substitut
Sleep	Sleep	Bluetooth	+  Shift + 4
Dim	TV/R	vTuner	+  Shift + 5
P.Scan	Text	Network	+  Shift + 6
A.Preset	AV	AUX	+  Shift + 7
MEM	Format	Digital	+  Shift + 8
RDS	Subt		
Prev.CH	Pre Ch		
I<	I<<		
<<	<<<		
>>	>>>		
>I	>>I		
Stop	Stop		
Play	Play		
Pause	Pause		
Phono	+  Shift + 1		
FM/AM	+  Shift + 2		
USB	+  Shift + 3		

Original	Substitut
Bluetooth	+  Shift + 4
vTuner	+  Shift + 5
Network	+  Shift + 6
AUX	+  Shift + 7
Digital	+  Shift + 8





Original	Substitut
Power On	Power
Power Off	Shift + Power
Left	Left
Right	Right
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Vol+ Stereo	Vol +
Vol- Stereo	Vol -
Stereo	Dual

Original	Substitut
Cable/Sat	Green
CD	Yellow
TV	Blue
Mute	Mute

 




Original	Substitut	Original	Substitut
Power On	Power	2	2
Power Off	Shift + Power	3	3
Mute	Mute	4	4
Stereo	Shift + Dual	5	5
Cable/SAT	Green	6	6
TV	Blue	7	7
CD	Yellow	8	8
Menu	Menu	9	9
Harman Volume	Smart	0	0
Exit	Exit	Clear	Shift + Exit
Tone Control	Back	Direct	Guide
Up	Up	Vol+ Stereo	Vol +
Down	Down	Vol- Stereo	Vol -
Right	Right	CH/Tuner Down	Ch +
Left	Left	CH/Tuner Up	Ch -
OK	Ok	Speaker 1	Options
1	1	Speaker 2	Dual





Original		Substitut		Original	Substitut
	Sleep		Sleep		
	DIM		TV/R		
	P.Scan		Text		
	A.Preset		AV		
	MEM		Format		
	RDS		Subt		
	Prev.CH		Pre Ch		
	I<		I<<		
	<<		<<		
	>>		>>		
	>I		>>I		
	Stop		Stop		
	Play		Play		
	Pause		Pause		

