 





 




 









 

 







 



















 

 
 


 





Original	Substitut
	Source  AV / Input / RDS
	Power  Power
	Mute  Mute / Dimmer
	TXT  Text / Goto
	Lang I/II  Audio / Lang I/II
	Rec  Rec / Rec Mode
	[>]  Eject / Surround
	Stop  Stop / Hold
	Play/Pause  Play / Slow
	Play/Pause  Pause / Step / Freeze
	<<  << / Tune-
	<<  I<< / Preset-
	>>  >> / Tune+
	>>  >>I / Preset+
	Red  Red / Netflix / Search
	Green  Green / APP / Repeat
	Yellow  Yellow / YouTube / Repeat

Original	Substitut
	Blue  Blue / Prime Video / Random
	_  Sound / Title
	Del  Exit / Cancel / Clear
	Vol+  Vol+
	Home  Menu / Home
	CH+  CH+ / Page+
	Vol-  Vol-
	Mouse  Smart / List
	CH-  CH- / Page-
	Up  Up
	Left  Left
	OK  OK
	Right  Right
	Down  Down
	Settings  Setup / OPT /
	Back  Back / Return
	EPG  Guide / EPG / -/-





Original	Substitut	Original	Substitut
	Recall		Fav / Marker / PC
	FAV	+	Shift + Fav / Marker / PC
	Info		Info / Angle
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Subtitle		Subtitle / EQ
	0		0
	Format		Picture / Format

