



Original	Substitut	Original	Substitut
 Power	 Power	 Left	 Left
 ACC On	 AV / Input / RDS	 Select	 OK
 ACC Off	 Shift + AV / Input / RDS	 Right	 Right
 CD	 Shift + 3	 Down	 Down
 CD2	 Shift + Red / Netflix /	 Menu	 Menu / Home
 TUNER	 Shift + 6	 Stop	 Stop / Hold
 PH/AU	 Text / Goto	 I<< Back	 I<< / Preset-
 SAT	 Shift + 0	 Play	 Play / Slow
 TV	 TV/Radio /	 Pause	 Pause / Step / Freeze
 LV	 Setup / OPT /	 REW /	 << / Tune-
 DVD	 Shift + 2	 FF / CHANNEL+	 >> / Tune+
 TAPE	 Shift + 5	 +10	 Guide / EPG / -/--
 TAPE2	 Blue / Prime Video / Random	 1	 1
 VCR	 Shift + 4	 2	 2
 VCR2	 Yellow / YouTube / Repeat	 3	 3
 Up	 Up	 Mode	 D.Menu / Top
 Info	 Info / Angle	 4	 4

Original	Substitut	Original	Substitut
 Left	 Left	 Select	 OK
 Right	 Right	 Down	 Down
 Down	 Down	 Menu	 Menu / Home
 Menu	 Menu / Home	 Stop	 Stop / Hold
 Stop	 Stop / Hold	 I<< Back	 I<< / Preset-
 I<< Back	 I<< / Preset-	 Play	 Play / Slow
 Play	 Play / Slow	 Pause	 Pause / Step / Freeze
 Pause	 Pause / Step / Freeze	 REW /	 << / Tune-
 REW /	 << / Tune-	 FF / CHANNEL+	 >> / Tune+
 FF / CHANNEL+	 >> / Tune+	 +10	 Guide / EPG / -/--
 +10	 Guide / EPG / -/--	 1	 1
 1	 1	 2	 2
 2	 2	 3	 3
 3	 3	 Mode	 D.Menu / Top
 Mode	 D.Menu / Top	 4	 4





Original	Substitut	Original	Substitut
	5		5
	6		6
	Trim		Sleep / Timer
	7		7
	8		8
	9		9
	Level +		CH+ / Page+
	SPKR 1 / AM / Disc		Red / Netflix / Search
	0		0
	SPKR 2 / FM /		Green / APP / Repeat
	Level -		CH- / Page-
	Mute		Mute / Dimmer
	Volume -		Vol-
	Volume +		Vol+

