

 




Original	Substitut
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 ✓	 Guide / EPG / -/--
 0	 0
 Red / <<<	 Red / Netflix / Search
 Red / <<<	 <<< / Tune-
 Green / Stop	 Green / APP / Repeat
 Green / Stop	 Stop / Hold

Original	Substitut
 Yellow / Play	 Play / Slow
 Yellow / Play	 Yellow / YouTube / Repeat
 Blue / >>>	 >>> / Tune+
 Blue / >>>	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI	 D.Menu / Top
 Exit / Recall	 Back / Return
 Exit / Recall	 Exit / Cancel / Clear
 Info	 Info / Angle
 Prog +	 CH+ / Page+
 TV / Radio	 TV/Radio /
 Vol +	 Vol+
 Prog -	 CH- / Page-





Original	Substitut
MENU	HOME MENU Menu / Home
Vol -	VOL Vol-
TV/SAT	LIST SMART Smart / List
TXT	GOTO TEXT Text / Goto
Stop	STEP-FREEZE Pause / Step / Freeze
EXT	MEDIA DISPLAY Display / Media
SAT1 + OK	SHIFT + DVD 2 Shift + 2
SAT2 + OK	SHIFT + CD-STB 3 Shift + 3
TV + OK	SHIFT + TV 1 Shift + 1
PIP	FORMAT PICTURE Picture / Format

Original	Substitut





Original	Substitut	Original	Substitut
	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	✓		Guide / EPG / -/--
	0		0
	A/B		Shift + Yellow / YouTube /
	Red / <<<		<<< / Tune-
	Red / <<<		Red / Netflix / Search
	Green / Stop		Green / APP / Repeat

Original	Substitut	Original	Substitut
	Green / Stop		Stop / Hold
	Yellow / Play		Play / Slow
	Yellow / Play		Yellow / YouTube / Repeat
	Blue / >>>		>>> / Tune+
	Blue / >>>		Blue / Prime Video / Random
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	SFI		D.Menu / Top
	Exit / Recall		Exit / Cancel / Clear
	Exit / Recall		Back / Return
	Info		Info / Angle
	Prog +		CH+ / Page+
	TV / Radio		TV/Radio /
	Vol +		Vol+





Original		Substitut		Original		Substitut	
	Prog -		CH- / Page-				
	Menu		Menu / Home				
	Vol -		Vol-				
	TV/SAT		Smart / List				
	TXT		Text / Goto				
	Stop		Pause / Step / Freeze				
	EXT		Display / Media				
	SAT1 + OK	+	Shift + 2				
	SAT2 + OK	+	Shift + 3				
	TV + OK	+	Shift + 1				





Original	Substitut
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 ✓	 Guide / EPG / -/--
 0	 0
 A/B	 Shift + Yellow / YouTube /
 Red / <<<	 Red / Netflix / Search
 Red / <<<	 <<< / Tune-
 Green / Stop	 Stop / Hold

Original	Substitut
 Green / Stop	 Green / APP / Repeat
 Yellow / Play	 Play / Slow
 Yellow / Play	 Yellow / YouTube / Repeat
 Blue / >>>	 >>> / Tune+
 Blue / >>>	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI	 D.Menu / Top
 Exit / Recall	 Back / Return
 Exit / Recall	 Exit / Cancel / Clear
 Info	 Info / Angle
 Prog +	 CH+ / Page+
 TV / Radio	 TV/Radio /
 Vol +	 Vol+





Original		Substitut	
	Prog -		CH- / Page-
	Menu		Menu / Home
	Vol -		Vol-
	TV/SAT		Smart / List
	TXT		Text / Goto
	Stop		Pause / Step / Freeze
	EXT		Display / Media
	SAT1 + OK		Shift + 2
	SAT2 + OK		Shift + 3
	TV + OK		Shift + 1

Original		Substitut	

