





 








 











 

 







 





 

 








Original	Substitut	Original	Substitut
	Power		Power
	Eject		Eject
	Mute		Mute
	OSD / Info		Info
	V-Mode		Smart
	P/N / Fav		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Shift +
			Guide

Original	Substitut	Original	Substitut
	Goto		Media
	Setup		Options
	Angle		Format
	Text / Title		Text
	Subtitle		Subt
	Menu		Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	PBC / EPG		Guide
	Source		AV
	Exit		Exit
	<<		<<
	>>		>>
	Play / Pause		Play





Original	Substitut
Play / Pause	Pause
Stop	Stop
I<<	I<<
>>I	>>I
Red / Prog	Red
Red / Prog	Sleep
Green / Step	Green
Yellow / Repeat	Yellow
Yellow / Repeat	Shift +  Text
Blue / A-B	Blue
Zoom	Shift +  Eject
Slow	TV/R
Vocal	Dual
Audio	Shift +  Dual
CH-	Ch -
CH+	Ch +
Vol-	Vol -

Original	Substitut
Vol+	Vol +

