



Original	Substitut	Original	Substitut
 Power	 Power	 Left	 Left
 Mute	 Mute	 OK	 Ok
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 Menu	 Menu
 4	 4	 Exit	 Exit
 5	 5	 Vol+	 Vol +
 6	 6	 Vol-	 Vol -
 7	 7	 P.Mode	 Format
 8	 8	 S.Mode	 Dual
 9	 9	 CH+	 Ch +
 0	 0	 CH-	 Ch -
 -	 GUIDE	 Input	 Shift + AV
 Recall	 Back	 Fav / Angle	 Pre Ch
 Source	 AV	 Zoom	 Eject
 Display	 Info	 Sleep	 Sleep
 Up	 Up	 Red	 Red





Original		Substitut		Original	Substitut
	Green / 3D		Green		
	Green / 3D		3D		
	Yellow		Yellow		
	Blue		Blue		
	Play / Pause		Play		
	Play / Pause		Pause		
	FR		<<		
	FF		>>		
	Stop		Stop		
	Prev		I<<		
	Next		>>I		
	Media		Media		
	Keyboard		Text		
	PC		D. Menu		
	Refresh		List		
	Search		TV/R		
	Home		Smart		

